




Measure Horizontal Distance tool

Design Manual
Chapter 21
Automation Tools
Instructions

Originally Issued: 11-26-08
Revised: 04-30-09

This tool can be accessed from the Geopak:
D&C Manager, as shown at the right.

(If the item is not found as shown, use the
D&C > Edit > Find tool to locate it.)

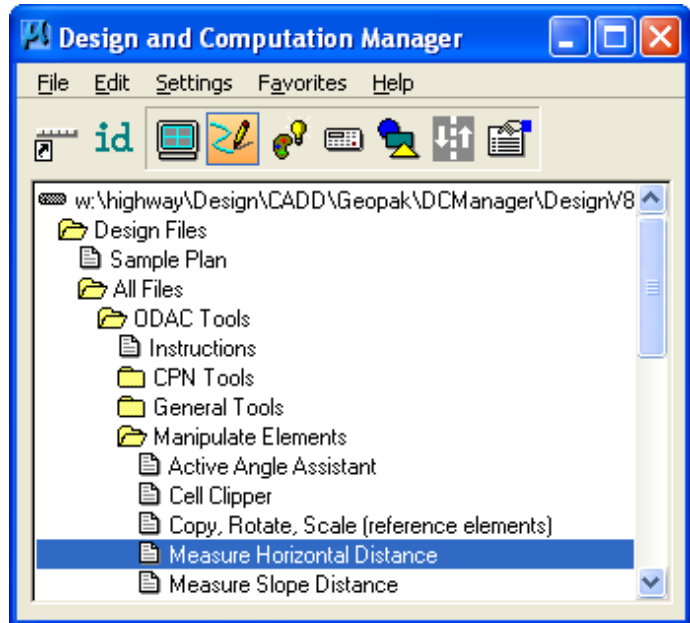

Double-clicking the **Measure Horizontal Distance** tool produces the dialog shown at the right. The instructions are provided at the top of the dialog. If the **Running total of distances** check-box is checked, , the program will retain a cumulative total of two or more distances.

