




Move element(s) from Level to Level

Design Manual
Chapter 21
Automation Tools
Instructions

Originally Issued: 11-26-08
Revised: 04-30-09


This tool can be accessed from the Geopak:
D&C Manager, as shown at the right.

(If the item is not found as shown, use the
D&C > Edit > Find tool to locate it.)

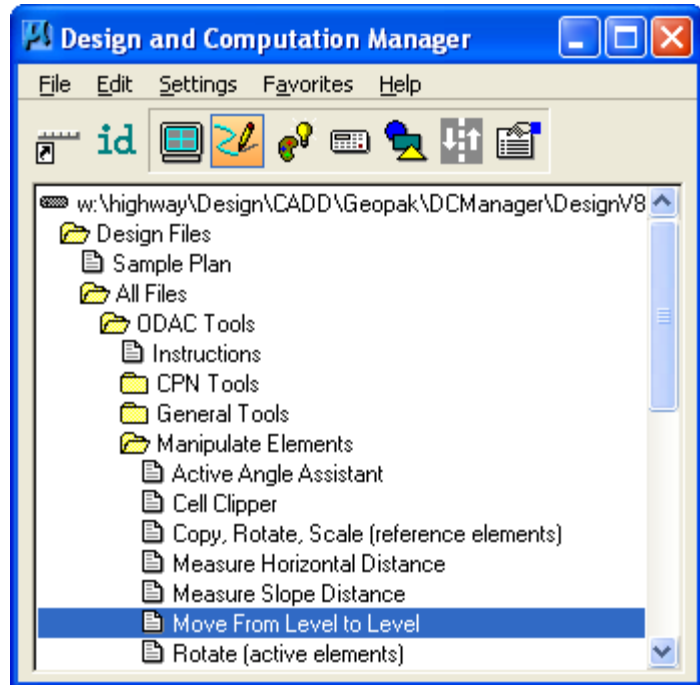


The **Move from Level to Level** program will move all specified element types from one selected level to a different selected level.

The element type to be moved is selected from the drop-down list, with options including **Text**, **Cells**, **Lines**, or **All** element types, as shown at the right.

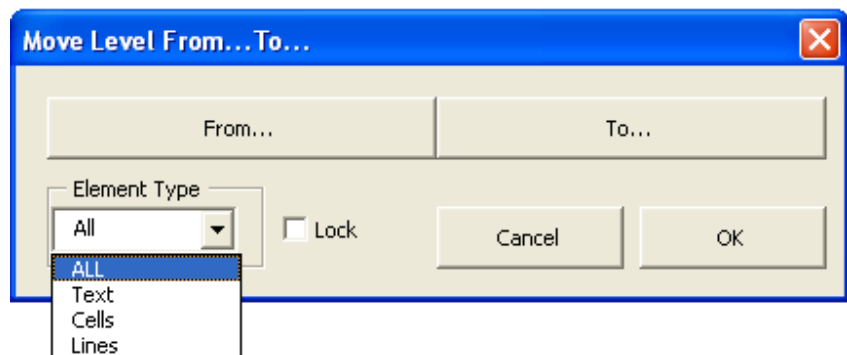


The **From** and **To** buttons produce selection lists to select the levels the elements are to be moved “**From**” and “**To**”, as shown at the right.

As shown in the **Level From** list box, the list of levels is not initially sorted in any particularly useful manner.

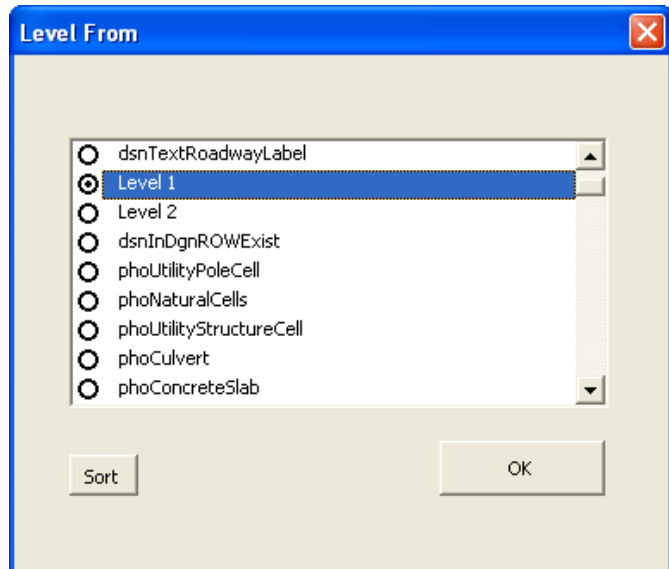

However, as shown in the **Level To** list box, the **Sort** button has been used to alphabetize the level names within groups, (dsn, brg, pho, etc.)

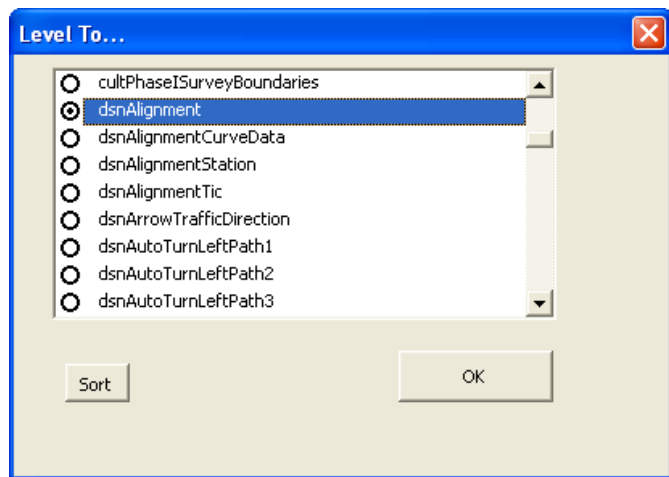

When the level selections are complete, the “**Move Level From ... To ...**” dialog remains visible and the appearance will resemble the one shown at the right.

The **Lock** check-box, () , will toggle **Level Lock ON** for the **Move To** selected level, after the move is done.

