

June 17, 2025

## **Trimble Access NTRIP Settings**

This document provides step-by-step instructions for configuring Trimble Access NTRIP settings. If you have any questions, please contact your software support.

Dan Messerich, PLS Iowa Real Time Network Administrator

## 1. Select Menu Button





## 2. Select Settings > Connections > GNSS Contacts



## 3. Select New





4. Name your connection and have your settings match the listing below.

Name	Contact type
IARTN	Internet rover
Route through controller	Network connection
Yes	Operating System - Wi-Fi, Cellular 🕨
NTRIP Configuration	
Use RTX (Internet)	Use NTRIP
No	Yes
Use NTRIP v1.0	Use proxy server
	No No
Connect directly to Mountpoint	NTRIP username
No No	precision2
NTRIP password	
	0
P Address	IP Port
165.206.203.10	10000
Send user identity info	

- Use your NTRIP Username and NTRIP Password
- Contact type: Internet rover
- Route through controller: Yes
- Network Connection: Operating System Wi-Fi, Cellular
- Use RTX (Internet): No
- Use NTRIP: Yes
- Use NTRIP v1.0: not checked
- Use proxy server: no
- Connection directly to Mountpoint: No
- NTRIP username: precision2
- IP address: 165.206.203.10
- IP Port: 10000