RADIATION SAFETY & NUCLEAR GAUGE TRAINING

2020

Technical Training & Certification Program

Iowa Department of Transportation

Technical Training and Certification Program

Course Evaluation Sheet

As part of our continuing effort to improve the program, we ask that you please carefully fill out this evaluation sheet. Your responses are very important to us. We read each comment and consider your suggestions and feedback for future classes. Please use the back of the page if additional space is needed.

Course Name
(*Example: PCC I, AGG Tech*): _____ Course Instructor: _____

Location of course:
(*District or city*): _____

What type of agency do you work for:

a) DOT
b) County or City
c) Consultant
d) Contractor
e) Other

Were the instructor(s) effective in helping you learn? How could they be more helpful?

Were the instructional manuals helpful and user friendly? How could they be improved?

Is there a topic you would have liked to spend more time on? Less time on?

Do you feel prepared to work as a certified tech in this area?

What are one or two things you liked best about this class?

What are one or two things you would like to see done differently in this class?

Thank you!!!

IOWA DOT & ORGANIZATIONS

ADDRESS	PHONE NUMBER	FAX NUMBER	CONTACT PERSON
Technical Training & Certification Program & District 1 Materials 800 Lincoln Way Ames, Iowa 50010	515-233-7915 515-239-1819	515-239-1092	Brian Squier - TTCP Coordinator brian.squier@iowadot.us Hope Arthur - TTCP Coordinator hope.arthur@iowadot.us
District 2 Materials 428 43rd Street SW Mason City, Iowa 50401	641-422-9428	641-422-9463	Jon Kleven jon.kleven@iowadot.us
District 3 Materials 4621 US 75 North Sioux City, Iowa 51108	712-239-4713	712-239-4970	Alex Crosgrove alex.crosgrove@iowadot.us
District 4 Materials 2310 E. Seventh St. Atlantic, Iowa 50022	712-243-7649	712-243-5302	Mike Magers michael.magers@iowadot.us
District 5 Materials 205 E. 227th St. Fairfield, Iowa 52556	641-472-3103	641-469-3427	Ellen Davidson ellen.davidson@iowadot.us
District 6 Materials 5455 Kirkwood Blvd. SW Cedar Rapids, Iowa 52404	319-366-0446	319-730-1565	Rita Eichhorst rita.eichhorst@iowadot.us

		Phone Number	Fax Number
Wesley Musgrove	Construction & Materials Engineer	515-239-1843	515-239-1092
Todd Hanson	PC Concrete Engineer	515-239-1226	515-239-1092
Mahbub Khoda	Prestressed Concrete Engineer	515-239-1649	515-239-1092
John Hart	PC Concrete Field Engineer	515-239-1547	515-239-1092
Kyle Frame	Structures Group Manager	515-239-1619	515-239-1092
Curtis Carter	Structures Field Engineer	515-239-1185	515-239-1092
Chris Brakke	Pavement Management Engineer	515-239-1882	515-239-1092
Jeffrey Schmitt	Bituminous Field Engineer	515-239-1013	515-239-1092
Brian Gossman	Chief Geologist	515-239-1204	515-239-1092
Melissa Serio	Soils & Grading Field Engineer	515-239-1280	515-239-1092
Gregg Durbin	District 1 Materials Engineer	515-239-1926	515-239-1943
Robert Welper	District 2 Materials Engineer	641-422-9421	641-422-9463
Bill Dotzler	District 3 Materials Engineer	712-239-4713	712-239-4970
Timothy Hensley	District 4 Materials Engineer	712-243-7629	712-243-6788
Vacant	District 5 Materials Engineer	641-472-3103	641-469-3427
Roger Boulet	District 6 Materials Engineer	319-366-0446	319-730-1565

WEBSITES USED IN TTCP CLASSES

There are 3 websites you will use as a TTCP Student. You will set yourself up as a user of each of these 3 websites. It's important that you remember your user name and password for each site (hint: since you are setting each of them up yourself, you could use the same password for each site.)

IOWADOTU

https://learning.iowadot.gov/

This is where you register for classes and take web-based training. You can also print your training records transcripts here. Step-by-step instructions are available at https://iowadot.gov/training/technical-training-and-certification-program

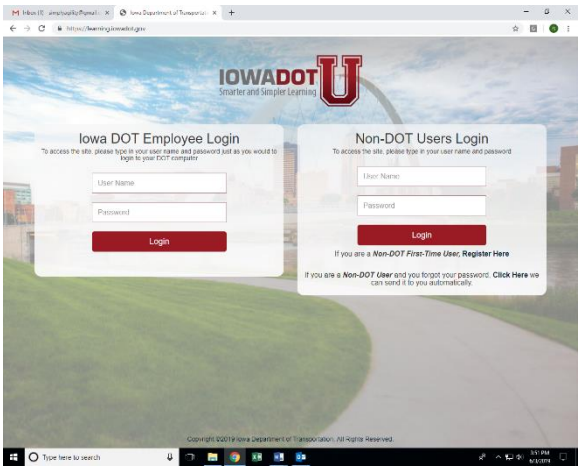

DMACC CONTINUED EDUCATION REGISTRATION

This is where you will confirm your attendance at a TTCP class. Your instructor will guide you through the steps to complete the DMACC Registration. DMACC is in partnership with the Iowa DOT to administer TTCP training and must keep their own attendance records.

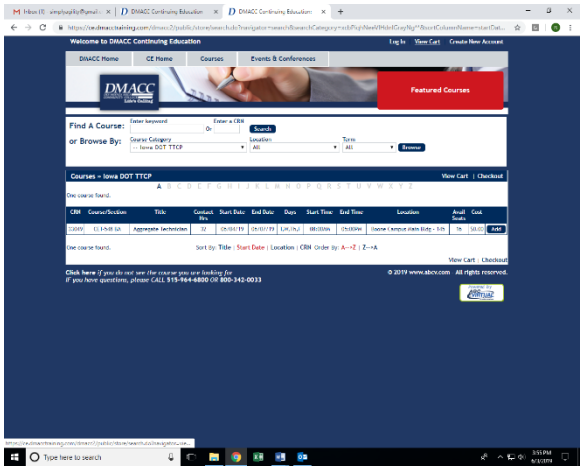

COMPUTER TESTING

All TTCP Exams will be done on the computer. Your instructor will guide you to the Test.Com website and assist with any registration requirements. Questions are multiple choice, and you will be able to see your score immediately as well as the questions that you missed.

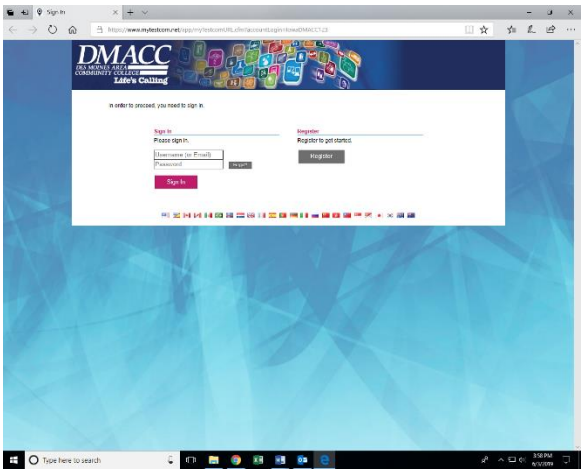

1 Table of Contents

1 Introduction to Nuclear Moisture Density Gauges 3

1.1 How Radiation Makes Them Work 3

1.2 Anatomy of a Gauge 4

1.3 Radiation Measurement: The Invisible Property 5

1.4 Gamma Ray Photon Radiation 5

1.5 Neutron Radiation 7

1.6 Safety Record 7

2 Radiation Basics 8

2.1 Atoms, Elements, Isotopes and the Periodic Table 8

2.2 Radioactivity, Contamination, Radiation and Decay 11

2.3 The Four Types of Radiation Emitted by the Gauge 12

2.4 Radiation Decay & the Half Life 14

2.5 Ionizing Radiation 15

2.6 Radiation Measuring Units 15

2.7 Biological Effects of Radiation – Putting Radiation Exposure in Perspective 15

2.8 Background Exposure vs. Occupational Exposure 17

2.9 Sources of Background Radiation 18

2.10 Measuring Your Exposure 19

2.11 External vs. Internal Exposure 19

2.12 Your Occupational Exposure Limits 21

2.13 Realistic Annual Average Exposures 21

3 Limiting and Tracking Your Exposure 22

3.1 ALARA –As Low As Reasonably Achievable 22

3.2 Tracking Your Exposure – Your TLD 26

3.3 Agencies, Licensing, Regulations and Recordkeeping 26

3.4 The Specific License 27

3.5 Enforcement 27

3.6 Protecting the General Public, Property and Our Employees 27

3.7 The Radiation Safety Officer (RSO) 27

4 Transportation and Storage of Gauges 28

4.1 A Step by Step HAZMAT Guide 28

5 Emergency Procedures 35

5.1 In the Event of Damage at the Worksite: 35
5.2 In the Event of Damage in an Auto Accident: 35
5.3 In the Event of Theft: 35
6 Gauge Operation 36
6.1 Standard Counts 36
6.2 Moisture Content and Density of Soils (IM 334) 37
6.3 Asphalt Moisture and Density of Cold-in-Place Recycling (IM 504) 40
6.4 PCC Density (IM 358) 40
6.5 Some Possible Reasons for Errors in Gauges 41
6.6 Gauge Maintenance Basics 42
7 Glossary 43

Appendices

NUCLEAR MOISTURE-DENSITY GAUGE SAFETY PROCEDURES MANUAL

IM 206 NUCLEAR TEST EQUIPMENT

IM 334 DETERMINING MOISTURE CONTENT & DENSITY OF SOILS, BASES & SUBBASES WITH A NUCLEAR GAUGE

IM 358 DETERMINING PLASTIC DENSITY OF PORTLAND CEMENT CONCRETE WITH A NUCLEAR GAUGE

IM 504 COLD-IN-PLACE RECYCLING of HOT MIX ASPHALT (HMA) PAVEMENT

1 Introduction to Nuclear Moisture Density Gauges

1.1 How Radiation Makes Them Work

Nuclear moisture density gauges have been in use for over thirty years. They offer the technician a quick and accurate means of determining density and moisture content of soils, asphalt and concrete. They all use essentially the same design and basic approach to determine these measurements.

Gauges consist of a radiation source that emits a directed beam of particles and a sensor that counts the received particles that are either reflected by the test material or pass through it.

By calculating the percentage of particles that return to the sensor, the gauge can be calibrated to measure the density and inner structure of the test material.

All moisture density gauges use two different **radioactive sources** to produce two different types of radiation. One of the radioactive sources, **Cesium 137**, emits **gamma ray photon radiation** to **determine density**, while the other radioactive source, **Americium 241** (combined with non-radioactive Beryllium), emits **neutron radiation** to **determine moisture content**.

Annual radiation safety training is required for all individuals working with portable gauges, even if only transporting them.

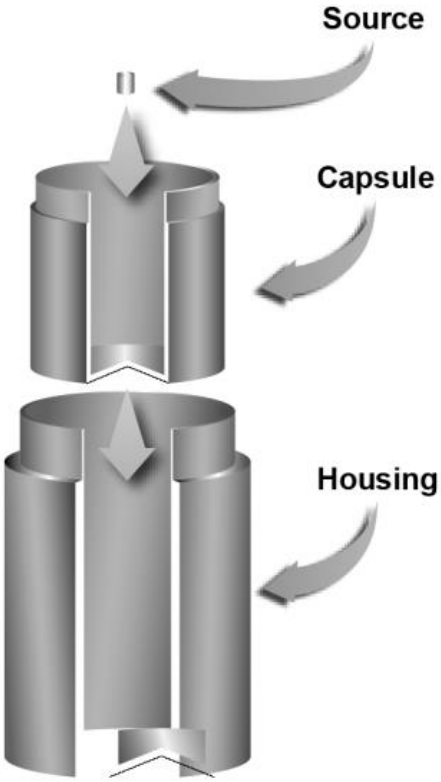

Capsule and housing caps not shown

As seen in this illustration, these sources are **double encapsulated** before being installed inside the gauge. This double encapsulation undergoes extensive integrity testing and is virtually impenetrable, forming a solid core of metal around the sources. The encapsulated source is then fused at the base of the metal source rod or embedded in the base of the gauge, giving the operator three levels of distinct metal shielding from the source.

The sources themselves have been solidified in a way that prevents them from leaking. Note the physical size of the density source bead – it is approximately half the size of a piece of rice. The moisture pellet is smaller than a baby aspirin. The final double encapsulated metal housing around these sources is about the size of a pencil eraser.

Both sources have been laser fused inside the gauge, leaving no way to gain access.

1.2 Anatomy of a Gauge

As seen in this depiction, gauges have a handle at the top of metal rods which are called **source rods** and **depth rods**. The handle at the top of the rods has a release mechanism that allows the source rod to be lowered out of the gauge into positions starting at the base of the gauge and continuing at predetermined notched positions below the surface. These notched positions can be readily seen along the spine of the depth rod. The notches are usually spaced 2 inches apart along a 12 inch rod, allowing the operator to choose the notch that matches the depth of the desired measurement.

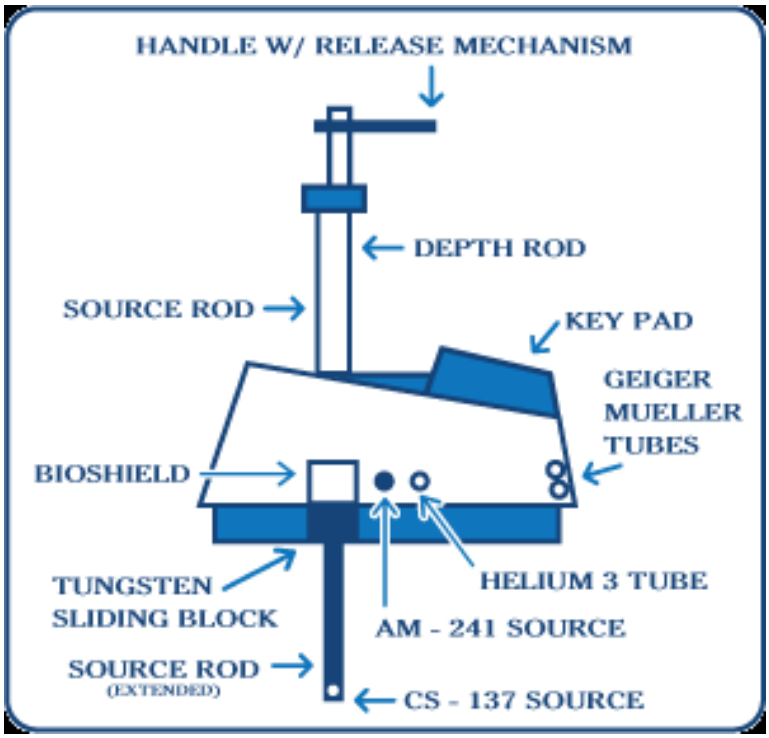

1.3 Radiation Measurement: The Invisible Property

A gauge uses nuclear radiation to determine **density** and **moisture**. Radiation can be described as numerous disintegrations from unstable elements ejecting sub-atomic energy or particles from the element's nucleus. Density and/or moisture measurements are achieved by counting the amount of radiation that can pass through matter to the gauge's detector tubes.

The density source is sending out a constant and steady level of radiation. The detector tubes are receiving and counting this constant and steady level. Any material between the source and the detector tube will reduce the amount of radiation received. As the material becomes more compacted, more and more of the radiation is stopped by the material. You end up with fewer counts, which is interpreted as a higher density of the material.

The moisture source sends out a different type of radiation that must be slowed down before it can be counted. The hydrogen in moisture acts to slow down this radiation, which results in higher counts. The gauge interprets higher counts as a higher level of moisture under the gauge.

You can't see or feel these types of radiation. But you must realize that the radiation is present and take precautionary steps to ensure that you keep yours, and everyone else's, exposure to radiation at a minimum.

1.4 Gamma Ray Photon Radiation

The Cesium 137 (Cs137) density source, also known as the emitter, resides at the bottom of the source rod. **Cs137 releases gamma ray photon radiation, which is used to measure density**. When the operator pushes the start key the gauge detector tubes begin measuring the amount of radiation that is moving from the Cs137 source to the Geiger Muller tubes, at the opposite end of the gauge.

As compaction of the material under the gauge increases, more of the gamma ray radiation will be absorbed, unable to make it to the detector tubes to be counted. The gauge interprets lower counts as a higher density.

While in the safe (retracted) position inside the gauge, the Cs137 source is surrounded by a tungsten bio-shield that offers optimum shielding that gives extra protection to the operator. A tungsten spring-loaded sliding block closes shut below the source rod whenever it is retracted after a test. This completes the bio-shield around the source rod.

When a test (except PCC density tests) is completed, the operator should immediately lift the gauge by the handle. The handle features a safety design that retracts the source rod into the safe position before the gauge can be lifted off the ground.

The Two Types of Transmission

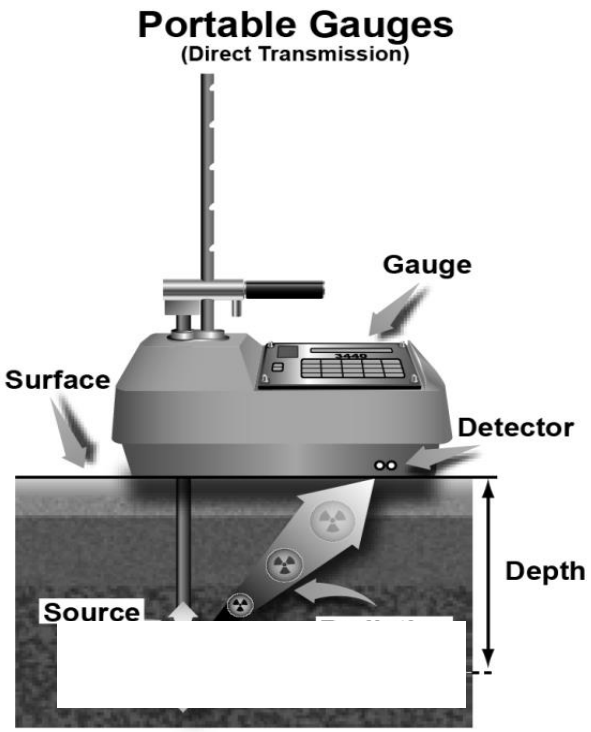

Direct transmission is typically used for a soils or a PCC bridge deck application. For soils testing, an access hole is made with the drill rod and the source rod is lowered to a predetermined depth, up to 12 inches. To determine the density of plastic PCC, the source rod is lowered into the freshly placed concrete. **Direct transmission is more accurate than backscatter transmission.**

Backscatter transmission is typically used for asphalt tests. The first depth notch on the gauge is the backscatter position. This will open the sliding block and place the source rod at the base of the gauge and at the top of the testing surface (No access hole is drilled for a backscatter test).

The gamma ray photons will penetrate the material to a maximum depth of 3–4 inches before making their way to the Geiger-Mueller detector tubes at the far side of the gauge.

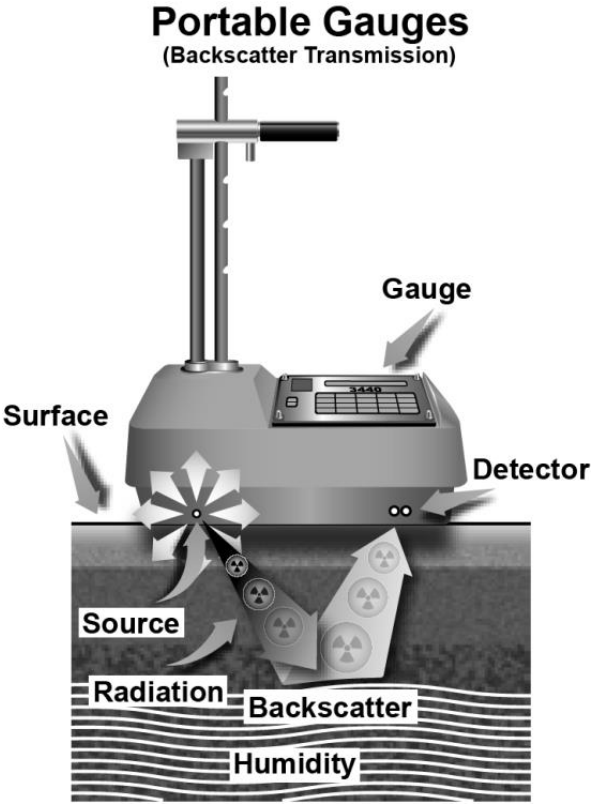

1.5 Neutron Radiation

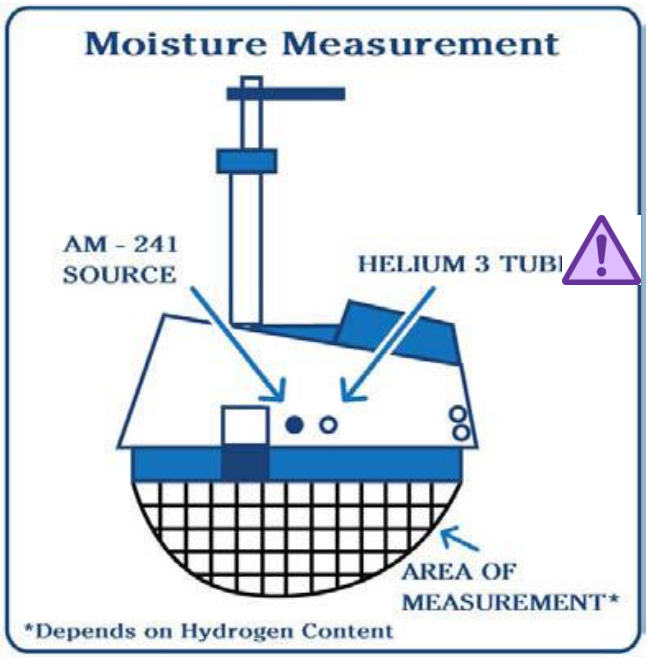

The Americium 241 (Am241) source permanently resides in the base of the gauge and is surrounded by additional shielding. Unlike the Cs137 in the source rod, it never releases out of the gauge. **The Am241 source releases neutron radiation to measure moisture.**

The neutron is emitted in a form known as a "fast neutron".

The Helium 3 detector tube resides next to the source. But the detector tube can only count a "slow" neutron. The fast neutron must be slowed. The best way to slow a fast neutron is for it to collide with the single proton in the nucleus of hydrogen. Hydrogen happens to be a key component of neutron gives a representative indication of moisture under the gauge. **This process is called thermalization**.

When the operator presses the start key the detector tubes count the thermalized neutrons that have collided and slowed from the hydrogen present under the gauge.

1.6 Safety Record

Gauges have a virtually spotless safety record. Considering that gauges have been used on millions of tests it is a very impressive record.

There has likewise never been a known case where a gauge has been stolen and used to make a weapon (dirty bomb) or harm anyone. You may be surprised to find that there has never been a "dirty bomb" of any kind exploded in the history of the planet.

The safety record of the nuclear moisture density gauge is something the gauge industry is very proud of – let's keep it that way!

2 Radiation Basics

2.1 Atoms, Elements, Isotopes and the Periodic Table

To understand how radiation makes your gauge work you must first understand basic atomic structure. The universe and everything in it, including us, is made up of elements. That includes all solids, gases and liquids. The atom is the smallest unit of an element.

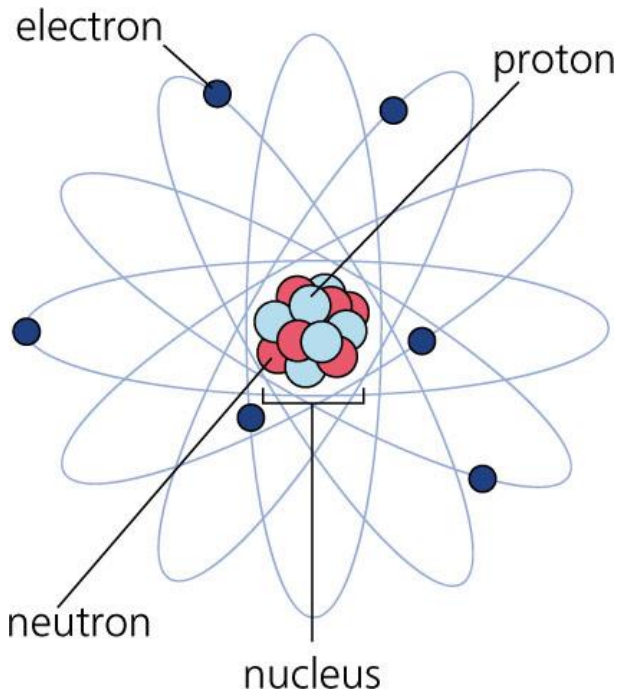

Atoms are mostly open space. The “heart” or center of an atom is the nucleus, which makes up about 1/8000 of the atom. It holds the sub-atomic protons and neutrons.

Sub-atomic electrons “orbit” the nucleus in what is known as an electron cloud. Protons have a positive charge and electrons have a negative charge. As long as you have the same number of protons as electrons, the atom is considered to be electrically neutral. Neutrons have no charge.

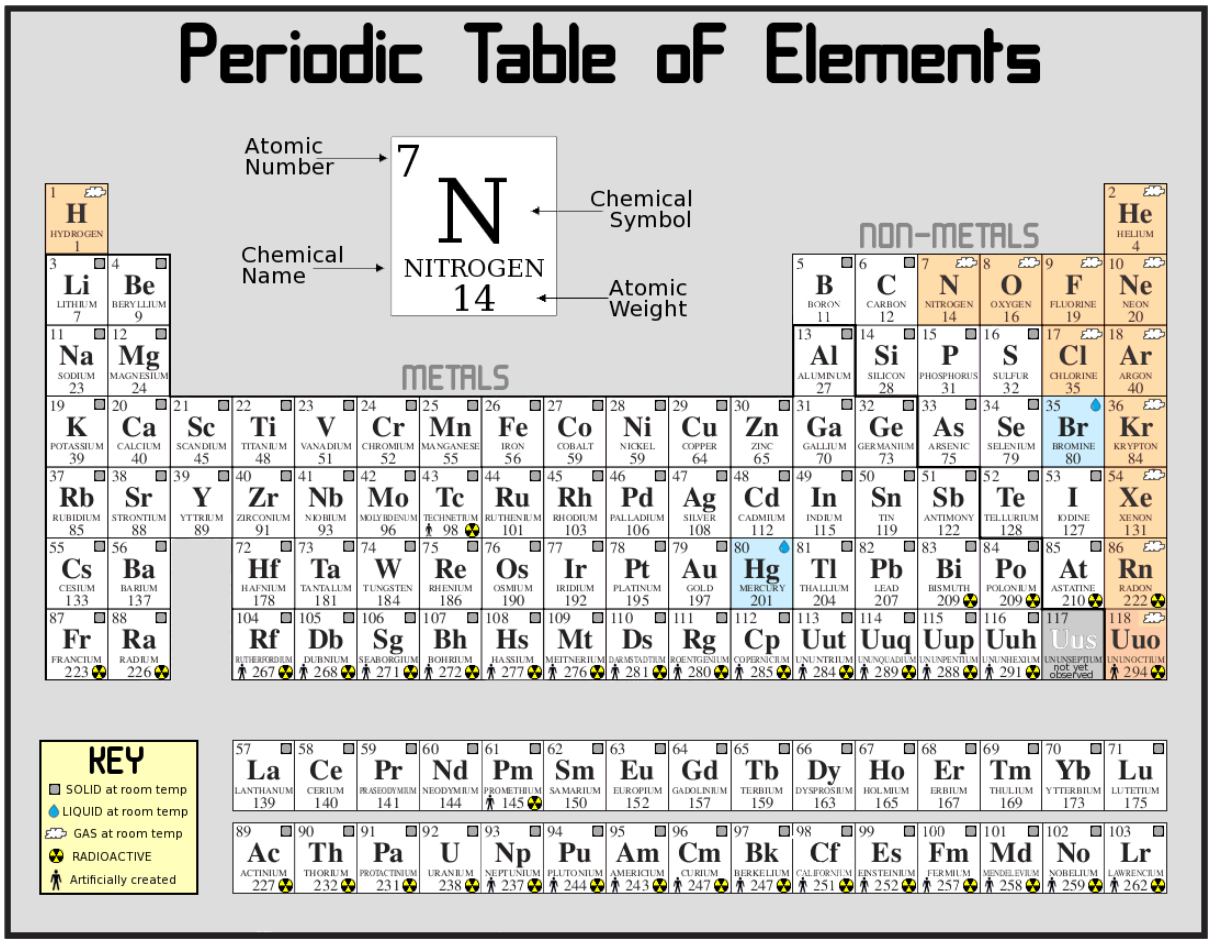

An element is a type of atom that is defined by its atomic number. All of the elements that we know of are listed on the Periodic Table.

The atomic number represents the number of protons in an element and is the number that you see running sequentially through the periodic table, from #1 Hydrogen to #118 Ununoctium (Elements 1–92 are naturally occurring, everything above 92 can be considered man-made). If you could physically count the number of protons in a given element you could match that number to the atomic number on the periodic table to determine which element you are looking at. But atoms are tiny. There are more atoms in a single glass of water than there are glasses of water from all the oceans on earth. You can put a trillion of them on the head of a pin. One strand of your hair is one million atoms thick. If the number of protons in the nucleus were to change, the element would change.

The other number in the “box” is the mass number. Virtually all the mass of an element comes from the protons and neutrons – electrons consist of energy and contain virtually no mass. Conveniently, the mass number for one proton or one neutron is approximately one. The mass number tells you the number of protons and neutrons an element has in its nucleus. If you could, all you need to do is count the total number of protons and neutrons in the nucleus to approximate its mass number.

The periodic table already tells you the atomic number (# of protons) and mass number (total number). To determine the number of neutrons just subtract the atomic number from the mass number.

Elements are generally referred to by their mass number. For example, #6 Carbon, in its natural, stable state, is referred to as Carbon 12.

More stable elements are those that have an equal number of electrons, protons and neutrons. Carbon, #6 on the periodic table, has 6 electrons, 6 protons and 6 neutrons – relatively nice and stable.

But there are versions of a given element that are not so completely balanced. These variations of a given element are known as **isotopes**. Isotopes of a given element all have the same number of electrons and protons, but the number of neutrons vary. For example Carbon can have variations such as Carbon 13, Carbon 14, etc. Carbon 13 has an extra neutron while Carbon 14 has two extra neutrons. They are still Carbon, just not as balanced as Carbon 12. All elements have these variations.

The balance between the number of protons and neutrons in the nucleus is very important. **All atoms seek to become perfectly stable.** Iron, #26, is the most stable of all elements, which is why it is not only strong, but also in great abundance. There are two forces present inside a nucleus, the “electro-magnetic force” and “strong nuclear force”. Iron not only has an equal number of sub-atomic particles, it also has the most stable balance between the two forces. In terms of stability, all lighter and heavier elements dream of being as stable as Iron.

Lighter elements typically need fusion to combine with other elements to create a new element that is more Iron-like. Heavier elements can be so unstable in proton/neutron ratios that they will tend to fall about on their own, becoming new, lighter elements in the process. Many of these unstable heavier elements will eventually change into Iron.

Elements that become too unstable are classified as radioactive. When it becomes too unstable the nucleus releases energy and/or sub-atomic (protons/neutrons) portions of itself in order to get to a more stable condition. This release of energy and matter is known as radioactive decay, better known as **radiation**.

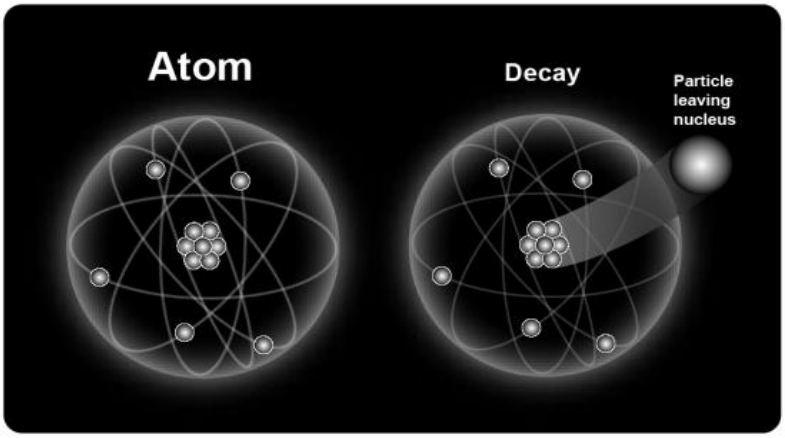

When an atom’s structure breaks down, as shown here by a particle leaving the atom’s nucleus, energy is released as ionizing radiation. This radioactive decay continues until the atom changes to a stable form.

Radioactive elements, and the radiation they release, have been used for thousands of beneficial applications. Radiation is a unique property that is used for energy production, non-destructive industrial measurements, medical observations (x-rays), as well as a cancer treatment.

Moisture density gauges use two different types of radioactive elements to produce the radiation necessary to determine density and moisture content.

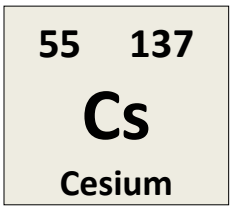

*Cesium 137, an unstable radioactive isotope of Cesium (#55 on the periodic table), is used to measure **density**.*

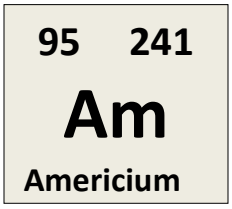

*Americium 241 (#95 on the periodic table), also an unstable radioactive isotope, is used to determine **moisture content**.*

2.2 Radioactivity, Contamination, Radiation and Decay

People sometimes have a difficult time understanding the difference between radioactivity and radiation. Radioactivity refers to an element that has a significant imbalance between neutrons, protons and forces. It results in the element throwing off energy and portions of its self during the decay process. Although the matter and energy that are emitted is coming from a radioactive source, the matter and energy themselves are not radioactive. They carry a charge that can change the electrical balance of an element in our body, thereby causing cell damage, but it does not make you radioactive.

As mentioned, **radioactivity is an element that is decaying**. But there is nothing that can happen to the radioactive element in the gauge that will cause it to explode, catch fire, ooze or seep. No accident, including being struck by heavy construction equipment, getting wet, or being struck by lightning will cause it to detonate into a destructive mushroom cloud.

These elements can only decay, getting weaker with every second. Over time they will decay to a negligible level.

The radiation, or decay, it gives off is non-radioactive sub-atomic particles or energy that can have an effect on the balanced cells in our body. It does not turn you radioactive – you're not going to glow after working all day with a gauge. The radiation amount you receive from a gauge is so small it is generally considered to be in the "**background**" range of the radiation that humans naturally absorb in a year. A further discussion of the effects of radiation on humans will be discussed in the next chapter.

To clarify, radiation is non-radioactive matter or energy that is emitted by a radioactive element, passes through space and collides with or is absorbed by matter.

If you were to be impacted by the actual physical radioactive material, you would be considered to be **contaminated.** You would have to go through a physical cleansing to remove the radioactive material.

Consider the x-rays that you receive at the doctor or dentist or the way they x-ray your luggage at the airport. X-ray radiation is essentially the same type of radiation the gauge uses to determine density. Do you ever consider yourself or your luggage to be contaminated or radioactive after getting x-rayed? Well, you're not – nor will you be after using the gauge. But you do want to limit your exposure to radiation as best you can, following the **ALARA** philosophy.

2.3 The Four Types of Radiation Emitted by the Gauge

Although there are four types of radiation emitted by the sources in a moisture density gauge, the gauge only uses two types to measure density and moisture. The shielding around the sources permanently absorbs the other two types. The four types are:

Alpha Radiation Decay – Alpha decay is a particle that consists of two protons & two neutrons. Relatively speaking, two protons & two neutrons make for a big chunk of radiation. It is emitted by the Americium 241 moisture source and only travels a very short distance. It is easily stopped - a single sheet of paper or the top layer of human skin will stop it. **The protective double encapsulated metal housing around the material permanently absorbs this radiation**. The gauge does not use it to make measurements. *You are never exposed to the gauge's alpha radiation*.

Note: The common household smoke detector uses Americium 241.

Beta Radiation Decay – Beta radiation is emitted by Cesium 137 density source and typically consists of a very low mass electron that travels very fast, but its negative charge will only penetrate matter to a short distance. The heavy shielding around the sources in the gauge absorbs all beta decay. The gauge does not use beta radiation for measurements. Y*ou are never exposed to the gauge's beta radiation.*

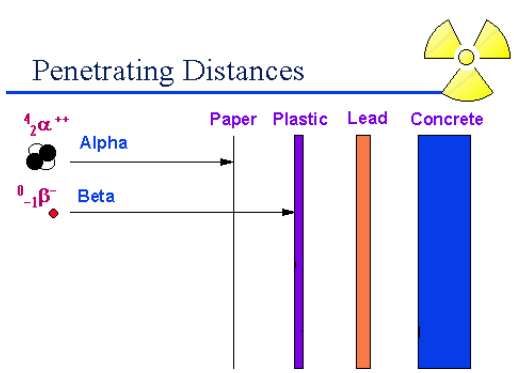

Gamma Ray Photon Radiation – Gamma Ray Photons are very similar to x-rays. They are a form of pure energy that is very penetrating. People think of lead as a good shield for radiation. It is as long as it is alpha, beta, x-ray or gamma ray photon radiation. Regarding human interaction, gamma ray photons can either be absorbed by the body, deflect the photon in a process called the Compton Effect, or the photon can pass completely through the body with no interaction.

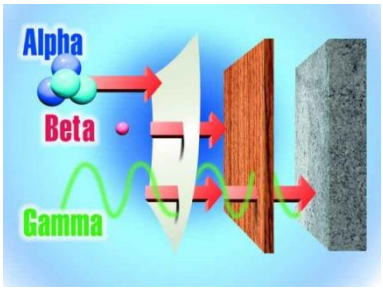

The gauge uses the gamma ray photons emitted by the Cesium 137 source to measure **density**. The more dense the material being measured, the more gamma ray photons will be absorbed and prevented from making their way to be counted by the detector tubes. The gauge interprets lower counts as a higher density. It is an indirect relationship – the fewer the counts – the higher the density.

Neutron Radiation – The Americium 241 in the gauge does not directly produce neutron radiation. It is combined with and utilizes non-radioactive Beryllium to produce the neutrons. Neutron radiation has no charge and is therefore highly penetrating into matter, including humans.

It is best shielded by anything loaded with hydrogen, like a plastic, and it is this characteristic that makes it effective in measuring moisture, which is loaded with hydrogen.

The radiation emitted by the moisture source in the gauge takes the form of a “fast” neutron. The detector tubes used in the gauge to measure neutron radiation cannot detect a fast neutron, only slow ones. The fast neutron must go through an interaction called thermalization before it slows down enough to be detected and counted.

Thermalization occurs when the neutron collides with a nucleus, ideally one that is equivalent in mass to its self. The element that best meets that requirement is the nucleus of hydrogen, which consists of just one proton and is approximately the same size as the neutron. Each interaction with a hydrogen nucleus transfers a portion of the neutron’s energy and slows it down. It takes 19 of these collisions to sufficiently slow the neutron to a state where it can be counted by the Helium 3 detector tube. It is a very direct relationship. The more moisture under the gauge, the more neutrons will be thermalized and counted by the detector tube.

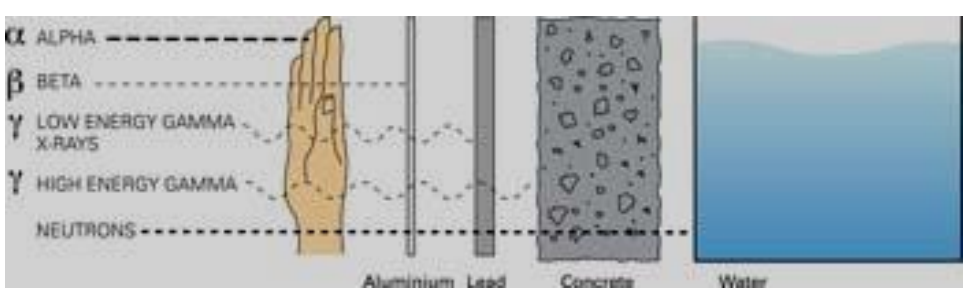

2.4 Radiation Decay & the Half Life

Radiation is the decay of the radioactive material in your gauge. It is unlikely the radioactive material will decay to a level that will make your gauge inoperative. Of more importance is the understanding that the radioactive material in the gauge will remain active for hundreds or thousands of years. For this reason, you must properly dispose of the gauge. You can't just throw it in a dumpster or a scrap yard.

Radiation decay is measured by the half-life. The half-life for most radioactive materials is known. For Cesium 137, the half-life is 30 years. For Americium 241, it is 432 years.

A brand new moisture density gauge used by the Iowa DOT, depending on the model, will have 8-10 millicuries of Cesium 137 and 40 millicuries of Americium 241. Each half-life will see a reduction of ½ of that material, so the 8-10 millicuries of Cesium 137 will decay to 4-5 millicuries in 30 years, while the 40 millicuries of Americium 241 will take 432 years to decay to 20 millicuries.

The second 30 year half-life of Cesium 137 will see the material decay to 2-2.5 millicuries while the second 432 year half-life of Americium will see the material decay to 10 millicuries. It takes 10 half-life periods for any radioactive material, regardless of the half-life period, to decay down to a negligible level.

So, for Cesium 137 it will take 300 years and, for Americium 241, it will take 4,320 years. That seems like a long time but there are many natural radioactive materials that take billions of years to completely decay.

[redacted]

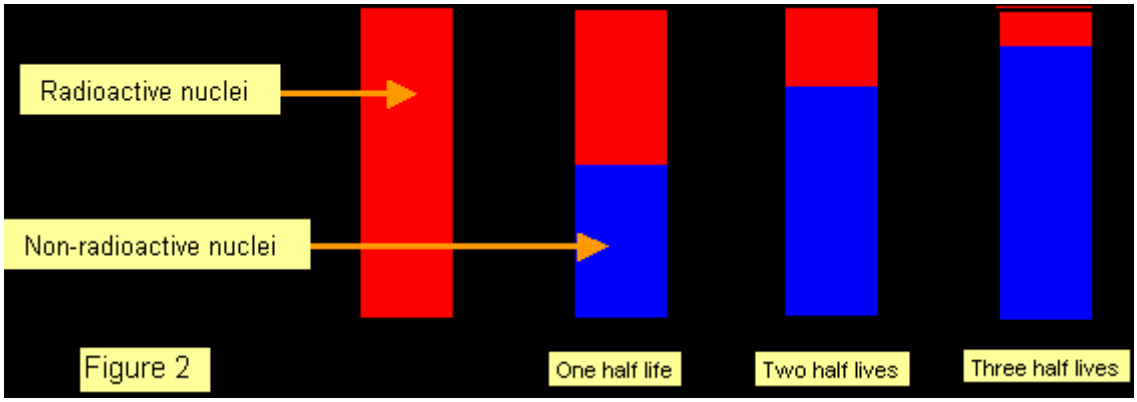

As the above illustration shows, after 3 half-lives, 1/8 of the radioactive material remains.

2.5 Ionizing Radiation

The two types of radiation used by the gauge to measure density and moisture are known as **ionizing radiation**. Ionizing radiation has the ability to detach (ionize) an electron from an atom or molecule in the human cell structure. This can damage or eventually kill the cell, but because the body repairs or replaces about a billion cells a day, the likelihood of harm is virtually non-existent. It typically takes huge exposures of ionizing radiation to cause harm or a cancer.

Humans have no senses capable of detecting exposure to ionizing radiation. But **radiation survey meters**, also known as Geiger Counters, are quite capable of detecting and measuring ionizing radiation and are one the primary reasons that your licensing agency wants you to be in possession of one.

2.6 Radiation Measuring Units

Although it has been present since the beginning of time, it has been only a little over a hundred years since humans first became aware of radiation. We had to first understand it and also quantify it by giving it a measuring unit.
Today, we measure radiation in curies (Ci), in honor of Madame Curie, one of the early pioneers in radiation physics. The strength or quantity property of radiation that is measured is its activity. Activity is defined as the number of disintegrations that occur per second of a given radioactive element. **The strength of a radioactive source is measured in curies or millicuries**. One curie equates to 37,000,000,000 disintegrations per second. That's a lot of activity and too large for measuring the strength of the sources in a gauge. The Cesium 137 (Cs137) in moisture density gauges is in the 8 – 10 millicurie range. The Americium 241 (Am241) source is in the 40 millicurie (mCi) range. A millicurie is 1/1000 of a curie.

2.7 Biological Effects of Radiation – Putting Radiation Exposure in Perspective

There is a big difference between radioactivity and radiation. A radioactive material releases radiation, but that radiation is not radioactive and will not turn you radioactive.

Nuclear radiation has been present since the beginning of time. We absorb nuclear radiation every day of our lives. It has always been present and it will always be present.

There is nothing you can do to hide from it nor is there a reason to. Harm from radiation would generally only come from a huge exposure. There are literally thousands of other potential contaminants we encounter in everyday life that could likewise harm or kill you if delivered in a large dose.

The air you breathe and the water you drink are loaded with trace amounts of lethal contaminants. The trace amounts of pesticides, solvents, diesel exhaust, and paint vapors we breathe in every day would all be killers if delivered in large quantity.

Factories, landfills, dry cleaners, gas stations, incinerators, mining operations, locomotives, farms boats, ATVs, body shops, auto interiors, plastics plants, bug spray,

furniture cleaners, window washer fluids, etc…… are all emitting noxious and poisonous fumes capable of causing harm or a cancer.

Cigarettes release over a thousand contaminants with every puff – and those contaminants are being ingested by many non-smokers (2nd hand smoke). Even the oxygen in the air you breathe, if ingested in higher concentrations, can be harmful.

Although not an exact analogy, the same rule that applies to radiation. It is typically only harmful in extreme exposures. But you are far more likely to receive harmful or cancer causing exposures to other contaminants than radiation. The strictly enforced regulations regarding radioactive materials make it highly unlikely that you ever will be subject to high exposures of radiation.

Your own genetics are far more likely to harm you than radiation. As a matter of fact, radiation, in the form of cancer killing medical treatments, is far more likely to save you than kill you.

Everyday activities are far more lethal to humans than radiation. Driving a car, flying in an airplane, bee stings, snake bites, lightning strikes, bike riding, falling off a roof, or a thousand other calamities rank higher than radiation on the mortality hit list. Virtually any other industry is more lethal to humans than the nuclear industry.

Humans do have one major thing going for them – their bodies. The human body is an incredibly resilient machine. Our bodies replace over a billion dead or damaged cells every day. As long as we're not overwhelmed by any particular toxin we have remarkable built-in recuperative abilities. It is ultimately the failure of our aging brain and organs that will eventually do us in.

To put things in perspective consider the following risks:

Health & Safety Risk	Estimated Life Expectancy Loss
Smoking 20 Cigarettes per day	2250 days
Being 30% overweight	1300 days
Drinking alcohol - U.S. average	365 days
Home accidents	95 days
Using a gauge for 70 yrs & receiving twice the annual average dose	7 days

2.8 Background Exposure vs. Occupational Exposure

Exposure to radiation can be put into two categories; background exposure and occupational exposure.

Background radiation is any exposure to radiation that is not part of your job. Natural exposures include the cosmic radiation that makes it through our atmosphere and terrestrial sources such as radon and radioactive elements imbedded in the ground or stone. Other natural radioactive elements (Carbon 14 & Potassium 40) enter and are stored in our bodies by way of the food we eat and water we drink. These trace internal amounts give off and expose an individual to more radiation than is typically received working around a gauge for a year. Medical x-ray exposures are also included in the total. **The average yearly radiation exposure dosage for a U.S. citizen is 620 millirem.**

It is not, however, uncommon for any of us to receive less or more than that in a given year (largely due to medical procedures we may undergo). **International Standards allow exposure to as much as 5,000 millirem a year for those who work with and around radioactive material**.

Occupational radiation exposure is that which is received while working around a gauge. A worker that is taking reasonable steps (ALARA) to keep their gauge exposure to a minimum can expect an annual exposure dosage around 1/10 of the average background exposure – somewhere in the 25-50 millirem range. That means you can work around a gauge every day of the year and still receive a very low exposure.

2.9 Sources of Ionizing Radiation

- Natural background radiation is everywhere.
- There are terrestrial and cosmic sources as well as those all over our planet.
- The level is variable by location.
- **The largest single natural source is radon.** Radon is a radioactive gas that can accumulate in homes and in the workplace. The levels vary by location but the national average is around 200mrem/year.
- Note that medical exposure contributes close to 50% of the average person's dose. Medical radiation dose comes primarily from CT scans and nuclear medicine procedures.
- **Tobacco –if you smoke 1 pack/day, add ~900 mrem**

Radiation Source: Natural	*Average Annual Whole Body Dose (millirem/year)*
Cosmic	31
Terrestrial	19
Radon	229
Internal	16
Total dose/year	**295**
Radiation Source: Man-Made	*Average Annual Whole Body Dose (millirem/year)*
Medical	300
Consumer Products	13
All others: fallout, air travel, occupational, etc.	12
Total dose/year	**325**
Accumulated dose/year	**620**

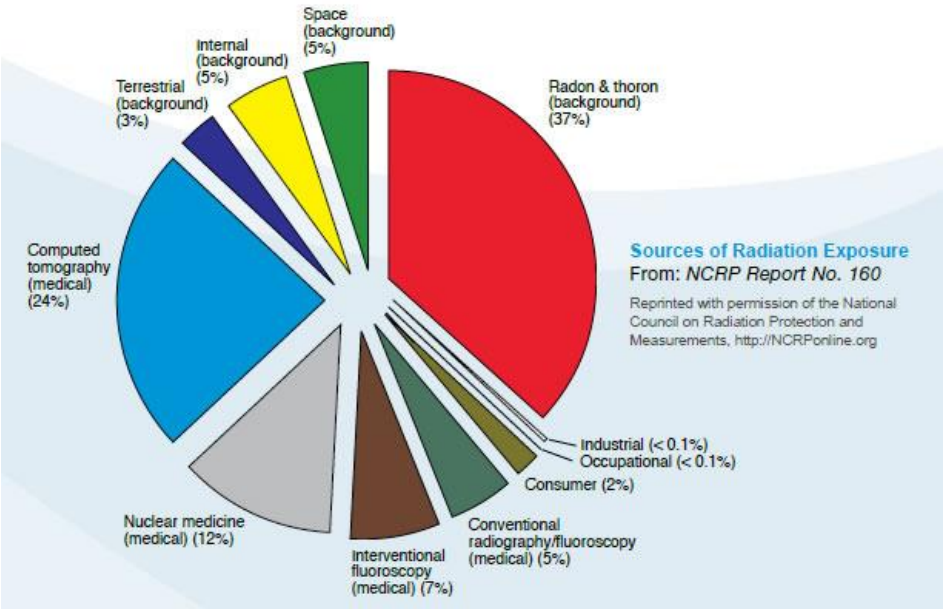

2.10 Measuring Your Exposure

The measuring unit (REM), used to determine how much exposure a person has received, is determined by measuring the volume (rad) of exposure multiplied by the type of radiation (QF - Quality Factor).

The **radiation absorbed dose (rad)** measures the volume of radiation an individual is exposed to. The volume must be multiplied by a **quality factor**, which is based on the type of radiation the individual is exposed to:

A rad of x-ray, gamma or beta radiation has a quality factor multiplier of 1	(1 rad x 1 QF =1 rem)
1 rad of slow (thermal) neutron has a quality factor multiplier of 5	(1 rad x 5 QF =5 rem)
A rad of fast neutron radiation has a quality factor multiplier of 10	(1 rad x 10 QF =10 rem)
A rad of alpha radiation has a quality factor multiplier of 20	(1 rad x 20 QF =20 rem)

REM is an exposure measurement that measures the volume and type of radiation.

An equal volume exposure of fast neutron radiation is 10 times more potent than that of x-ray, gamma or beta. Alpha would be twice as potent as fast neutron and 20 times as potent as x-ray, gamma or beta.

2.11 External vs. Internal Exposure

The only way to discuss the potential harm of radiation is to put exposures in perspective with levels that would be harmful to humans. Only then can we understand how little the potential harm of moisture density gauge radiation exposure is to the gauge operator.

When discussing the potential of radiation to harm our bodies we are most concerned about exposure to our vital organs. They are the machines that keep you in a healthy state.

External Exposures

External exposures are those that penetrate our bodies from the outside, through our skin to our vital organs.

Previously, the four types of radiation that are emitted by the radioactive sources in the gauge were discussed. The encapsulation around the sources permanently shields alpha and beta radiation. Even if they were unshielded they do not have the ability to penetrate our bodies deep enough to reach our vital organs. Gamma ray photon and neutron ionizing radiation can penetrate our bodies enough to cause cell damage to our organs, but it would take a huge exposure to cause acute radiation sickness or permanent damage.

Internal Exposures

Internal exposures come from radiation or radioactive materials ingested into our bodies. Internal exposures directly impact our vital organs and are much harder to remedy.

Internal or external contamination from moisture density gauges has never occurred nor has a significant external radiation exposure.

Chronic and Acute Exposures

Radiation exposure to humans can be divided into two categories; long term chronic exposure and short term acute exposure.

Long term **chronic exposure** is exposure that takes place over a longer period of time. Your annual average of 620millirem per year of background radiation is an example of long term chronic exposure. Cell damage from long term chronic exposure does not overwhelm the body's recuperative ability. Damaged cells are replaced or repaired by the body.

Acute exposures are those of greater quantities that generally happen all at once or in a very short time frame. This type of exposure can cause extensive damage to the body's vital organs and overwhelm the recuperative abilities of the body. The only examples of events that caused widespread acute exposures were the atomic bombs dropped on Japan and the incident at Chernobyl.

Acute exposures can cause radiation sickness. Higher exposure doses with likely effects are:

100rem (100,000mrem)	Slight blood lymphocyte reduction – lymphocytes are beneficial in fighting infections.
150rem (150,000mrem)	Flu like symptoms including nausea with vomiting and fatigue
250rem (250,000mrem)	Severe flu like symptoms. Can take up to 2 weeks to occur and up to 3 months to recover.
400+rem (400,000+mrem)	Severe flu-like symptoms, loss of hair, hemorrhaging, inflammation and emaciation. Typically fatal to 50% of those exposed over the next 4-6 weeks.
600+rem (600,000+mrem)	All of the above symptoms. Survival is unlikely.

It is highly unlikely you will ever encounter acute exposure levels and certainly not from a nuclear gauge.

2.12 Your Occupational Exposure Limits

The NRC and Agreement States have placed a **5,000mrem limit** on the amount of radiation a worker can receive in any cumulative year. Any worker exceeding that level will have to be reassigned to a job free of exposure to occupational radiation exposure.

Note: There has never been a case where a moisture density gauge user has received their annual limit.

Declared pregnant women will be limited to 500mrem for the term of the pregnancy. A pregnant woman should make her declaration in writing. She cannot be forced to relinquish her position unless she voluntarily declares.

Individuals under the age of 18 are limited to 500mrem per year (50 in some states).

In Iowa, declared pregnant women, employees under the age of 19 and temporary employees are not allowed to operate a nuclear gauge.

2.13 Realistic Annual Average Exposures

Most workers can expect an annual exposure to radiation from a gauge to be less than 100mrem. Exposures are tracked by the use of personnel dosimetry, such as TLD's. Any unusual amounts of exposure should be investigated and any inappropriate activities should be corrected.

3 Limiting and Tracking Your Exposure

3.1 ALARA –As Low As Reasonably Achievable

There is nothing more important as a condition of our license then for all of us to understand and practice good **ALARA**. **ALARA stands for "As Low As Reasonably Achievable"**. It is a concept and a way of life while operating a nuclear gauge. The purpose of ALARA is to protect you and the general public from radiation exposure.

The idea behind ALARA is for you to minimize the radiation exposure you receive from a gauge down to a level that is as low as possible, within reason. **ALARA states that "any unnecessary exposure is considered an excessive exposure"**.

There are three ways to make sure your and everyone else's exposure is kept to a minimum, **shielding**, **time**, and **distance**:

*The three elements of radiation protection are **shielding**, **time** and **distance**.*
Protective material placed between you and the source reduces the amount of radiation to which you will be exposed.
The less time you spend in the area of radiation, the less of a radiation dose you will receive.
Likewise, the effects of radiation fall off sharply the further you move away from the radioactive source.

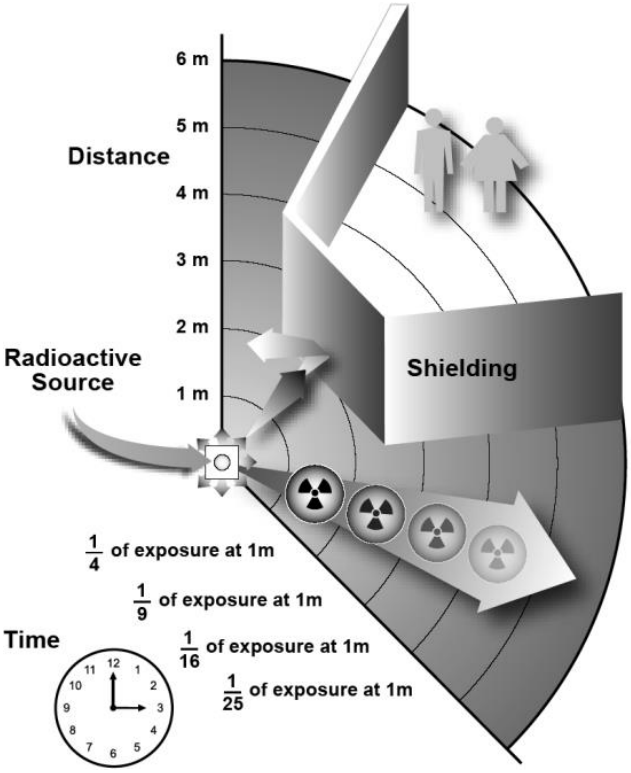

1) **Shielding** – Moisture density gauges are heavy, usually 30-40 lbs. One reason for all this weight is the shielding built into the gauge. The base of the gauge is made of lead, a good shield for radiation. An even better shield, tungsten, is typically used to create a bio-shield directly around the radioactive sources in the gauge. The safe position for a source rod is when the rod is fully retracted into the gauge. In the safe position the shielding will absorb most of the radiation released by the sources.

Let the shielding do its job! **Always keep the source rod retracted into the safe position when the gauge is not in use**. **Once a test is completed, and before you record the results, retract the source rod into the safe position**. If a PCC Density test is being performed, the rod must be quickly cleaned before the rod is retracted.

To give you an idea as to how effective the shielding is, consider the transport index of the gauge. The transport index of the gauge, also known as T.I., is a measurement of the radiation dose at one meter away from the gauge per hour.

Typically, a T.I. for a moisture density gauge is 0.2mrem – 0.6mrem (safe position). Let's say your gauge has a T.I. of 0.2. That means for every hour you sit one meter away from the gauge you are absorbing 0.2mrem radiation. At that rate you could sit one meter away from the gauge for a year and never achieve your allowable 5,000mrem dose for the year.

But, if you did sit unnecessarily and intentionally next to your gauge, you would be in violation of the ALARA principle. It doesn't matter that you are under your annual limit – it matters that this type of exposure is unnecessary and therefore excessive.

2) **Time** – You always want to limit your time around a gauge. When preparing the test area keep the gauge locked in the vehicle. When taking a test push the start button and then back away from the gauge (10 feet is usually sufficient). After completing the test, lock the gauge back in the vehicle. When transporting a gauge always store the gauge in the rearmost part of the vehicle.

Your time spent near a gauge should result in exposures that can be measured in seconds, not minutes.

3) **Distance** – Distance may be the most important and effective component of ALARA. Telling you to maintain your distance whenever possible from a radioactive source is the easy way to obey the distance component of ALARA.

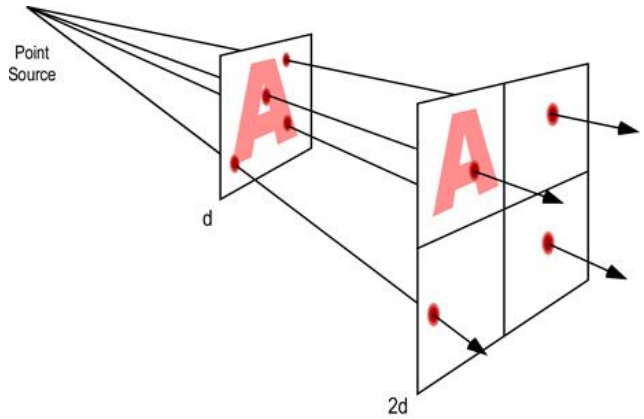

Explaining the reason is a little more difficult.

A law of physics called the **inverse-square law** explains that some physical quantity or strength is inversely proportional to the square of the distance from the source of that physical quantity. In a nutshell it means that doubling your distance from source decreases your dose by factor of four and tripling the distance decreases the dose nine-fold.

That's because the **radiation release is a constant that is being spread over an ever increasing area as you move away from it and it therefore quickly loses its intensity.**

The same holds true with gauge radiation. It quickly drops off as you move away from the gauge.

The intensity at one distance is typically known and it is necessary to calculate the intensity at a second distance. Using the following formula, we can calculate the intensity of a radioactive source at a different distance than the distance it was originally measured. The equation takes the form of:

$$I_2 = \frac{I_1 D_1^2}{D_2^2}$$

Where:	I_1	=	Intensity of Radiation at Distance 1
	I_2	=	Intensity of Radiation at Distance 2
	D_1	=	Distance 1 from source
	D_2	=	Distance 2 from source

For example: If the intensity of a radioactive source at 2' from the source is 6mrem/hour, what is the exposure of that same source 10' away?

Using this formula, substitute the known values and solve for I_2.

$$I_2 = \frac{I_1 D_1^2}{D_2^2}$$

$$\frac{6 \times 2^2}{10^2} = I^2$$

$$\frac{6 \times 4}{100} = I^2$$

$$\frac{24}{100} = I^2$$

24 ÷ 100 = 0.24 mrem/hr @ 10'

When you push the start button for a test you should move away as the gauge completes the test, typically one minute. Ten feet should be enough – you will want to stay close enough to move the gauge out of harm's way (heavy construction vehicles) or to limit access to the gauge by unauthorized individuals.

By practicing effective ALARA you can ensure that your exposure will be kept to a minimum.

3.2 Tracking Your Exposure – Your TLD

A TLD (Thermoluminescent Dosimeter) is a device that measures the amount of radiation that an individual absorbs over a given period of time. Having employees wear a dosimeter is the best way to track how much radiation they are exposed to while in the presence of a gauge.

TLD's contain small crystals that are capable of storing some of the energy from radiation. When heated to a specific temperature they release the energy in the form of light that can be measured to determine the dose. **TLD's are exchanged every 3 months**.

The dosimeters, usually a clip-on device, must be assigned to workers at the beginning of each period.

Every worker must be wearing a dosimeter on any day they encounter a gauge:

- **No dosimeter = no gauge use.**
- **Dosimeters cannot be shared.**
- **Dosimeters are easy to forget but don't store them with the gauge. Radiation is always present.**
- **Don't wear dosimeters to the dentist or doctor because x-rays will be recorded.**
- **Don't expose dosimeters to excessive heat or sunlight.**
- **A front belt loop or shirt pocket is a good place to wear a dosimeter.**

At the end of each quarter return your dosimeter your District Materials office.

Exposure reports show readings for the most recent quarter, year to date, and lifetime exposures for each employee. They must be kept on file permanently. Copies will be distributed to certified technicians annually.

3.3 Agencies, Licensing, Regulations and Recordkeeping

The possession and use of a moisture density gauge requires a license issued by the **Iowa Department of Public Health**.

Conditions that were originally established in your license must be followed. Any changes to these conditions will more than likely require an amendment to the license.

3.4 The Specific License

Moisture density gauge owners are required to have a “Specific License”. A specific license allows for the use of a device with sealed sources and places the responsibility of protecting the general public and environment in the hands of the licensee. The sealed sources must only be used in the device and for the purposes intended as described in the license.

The specific license identifies the radioactive material in its chemical and physical form, maximum activity and the purposes for which it may be used. A specific license requires the licensee to have appropriately trained and qualified personnel, appropriate facilities, equipment and procedures to ensure safe operations.

3.5 Enforcement

The regulations and the conditions of your license can be enforced by the NRC, Agreement States, the U.S. DOT (including divisions such as the FAA), the EPA, law enforcement (including the FBI), fire and rescue, and other federal, state and local agencies.

3.6 Protecting the General Public, Property and Our Employees

The mission of the regulatory agencies is to protect persons and property from any harmful effects of radioactive materials. That includes our employees. The agencies will conduct inspections and issue penalties to assure their mission is met. The DOT will be charged fees, including those for licensing, amendments, inspections, reciprocity and penalties, to help fund these agencies.

Another mission of the regulatory agencies is to help us run an effective and successful gauge radiation safety program.

3.7 The Radiation Safety Officer (RSO)

Your license requires that senior management designate an individual as Radiation Safety Officer (RSO). This individual will establish, maintain, enforce and control the company gauge radiation safety program and act as the contact person for the regulatory agency. When the Department is contacted or inspected by the regulatory agency they will want to speak with the RSO.

Senior management is required to supply the RSO with the necessary means, including training, to carry out the position of RSO and should work with the RSO to make sure that all conditions and compliance of the license are met.

The RSO will maintain complete, accurate and organized records. The RSO is responsible for making necessary amendments and notifying the regulatory agency of these amendments. The RSO will keep the safety program updated as to any changes in the regulations.

4 Transportation and Storage of Gauges

4.1 A Step by Step HAZMAT Guide

Step One - Storage and Security

An important requirement of our license is to provide a safe and secure storage area for gauges that protects members of the public from excessive levels of radiation. Levels for a member of the public individual are to be <100mrem/year or <2mrem/hr.

The term "general public" refers to anyone, even DOT employees, not certified in nuclear gauge operation.

A storage location for your gauge must be secure and at least 15 feet from a full-time work station.

There must be a "Notice to Employees" poster in a public area and a "Radioactive Materials" sign on the storage door.

Security of radioactive materials is a very important issue and we want to do all we can to make certain our materials remain under our control.

All gauges must be stored in an approved and secure storage area. **There must be 4 locks between the general public and radioactive material.** The term "general public" also refers to any DOT employee not certified in nuclear gauge operation.

In addition to the 4 lock requirement, gauges must also be **double-locked**. The "double-lock" requirement means that there are two barriers that prevent an intruder from reaching the gauge.

If a thief can find a way to walk away with the gauge by defeating only one lock then you have not met the conditions of the double-lock security requirement. For example, a gauge with its handle locked and 2 locks on the gauge case which is stored in a locked storage room has 4 locks, but if the locked room is broken into, there is nothing to keep a thief from just stealing the whole case and breaking the other locks at their convenience. It is not properly double-locked. The easiest way to solve this problem is to have the case secured to an anchor bolt or permanent structure in the room with a locked cable. That would force the thief to defeat two locks before stealing the gauge.

The same rule applies when transporting a gauge. To adequately secure a gauge in the open bed of a vehicle, two locks on the gauge case and two locked chains or cables securing the gauge/case to the body of the vehicle are required.

Cased gauges should also incorporate two locks – one on the gauge case and one on the handle of the gauge.

Step Two - Before You Go - Checking the Condition of the Gauge

When removing a gauge from security, make sure that the gauge and gauge case are intact and undamaged. Make sure the sliding block shielding the bottom of the source rod (above the hole in the base of the gauge is located) is functional and fully closed.

Always sign the gauge out. Gauge owners and the RSO must always know the location of each gauge at all times. Remember, the person signing out the gauge is personally responsible for its well-being.

All gauges have had their yearly leak tests performed, have been calibrated, lubricated, and have had new batteries installed by Central Materials personnel before the beginning of each construction season.

Before you take the gauge to perform a test, make sure the gauge is operational. Are the batteries working, or in the case of Troxler gauges, are the batteries charged? Turn it on and make sure the display appears.

Check the condition of the gauge case. Are there any holes, cracks or areas where the plastic has worn away? Are the clasps in undamaged condition? If there is any damage you can't use that case.

Does the gauge have a lock on the handle? Is there a lock on the outside hasp?

How do the labels look? Can you read all the information contained on all labels? If not, the label needs to be replaced.

Before you leave with the gauge you must remember your role in protecting yourself and the general public from any unnecessary exposure to radiation.

The concepts of ALARA; protecting yourself from radiation exposure through time, distance and shielding, are of upmost importance during the transport of the gauge.

You are primarily in charge of keeping the gauge out of harm's way and for keeping unauthorized individuals away from the gauge. The gauge is most vulnerable when it is away from the storage area.

Step Three - Are You Wearing Your TLD?

Don't leave the office without it. You can't transport or operate a gauge if you're not wearing your TLD. And you can't borrow one from someone else.

TLDs should be stored in a radiation free area at the office.

Step Four - Understanding the Labels and Documents

Before you remove the gauge for transport you must first have a bill of lading and emergency response documents. Labels and documents are used to communicate the hazards associated with portable nuclear gauges. Shippers and emergency response individuals are trained to recognize this information and take the necessary precautions. Examples of these labels and documents with explanations of the information are described on the next page.

There must be two Yellow Radioactive II labels on opposite broadsides. There must also be two Air Cargo Only Labels on opposite broadsides. These labels must always be in legible condition.

The Type "A" Package label identifies the type of case you are using to store the gauge as well as identifying information in the event of emergency response. It should be placed on one broadside of the gauge case next to one of the Yellow Radioactive II Labels and be in legible condition.

Shipping documents must also communicate the hazards associated with portable nuclear gauges. Every time a gauge is assigned to you and you are transporting the gauge anywhere, you must have this shipping document, also called a bill of lading.

The shipping document must also be accompanied by an Emergency Procedures Sheet. The emergency procedure sheet lists the emergency actions you would take in the event of an accident or theft. It also includes the 24 hour emergency contact numbers.

When a gauge is picked up at Central Materials in Ames, these 2 documents will be provided with the gauge.

You must have direct access to these two documents whenever transporting a gauge. Direct access also means readily viewable, meaning that the documents cannot be placed in the gauge case, glove compartment or trunk. **Place them in the seat beside you**. Emergency response personnel know to look for HAZMAT information on the passenger seat or document holder on the driver side door. If you leave the vehicle place the documents on the driver's seat.

Shipping Document for Radioactive Material

RQ, Radioactive Material, Type A Package, Special Form, 7, UN3332
Cs-137 0.30 GBq (8 mCi)
Am-241:Be 1.48 GBq (40 mCi)
Radioactive Yellow II label, TI=0.6

Shipper and Carrier:
Iowa Department of Transportation
800 Lincoln Way
Ames, IA 50010

Emergency Contacts:

Rodney Graven, Radiation Safety Officer (RSO)
515-233-7743 (7:00 AM - 3:30 PM)
515-370-2166 (Mobile)

Troxler 24 Hour Emergency Response Number
919-549-9539

Iowa Department of Public Health (IDPH)
515-281-3478 (7:30AM - 4:30PM)
515-323-4360 (After hours)

This is to certify that the above-named material is properly classified, described, packaged, marked and labeled and is in proper condition for transporting according to the applicable regulations of the Department of Transportation and Radioactive Material License No. 0006-1-85-PG issued by the Iowa Department of Public Health.

TROXLER

EMERGENCY PROCEDURES

In the event of damage at the work site:

1. Attend to anyone that may have been injured.
2. Determine the location of radioactive sources (typically the source rod).
3. Take control and deny access to the area (15 feet in all directions).
4. If a vehicle is involved keep it on site until it is determined that it is not contaminated.
5. Gather details about accident and damage – if possible, perform radiation survey.
6. Stay at the site but contact RSO with details
7. If necessary, the RSO will contact the IDPH and police.
8. The RSO will give guidance on whether to move the gauge or;
9. The RSO will travel to the site with a radiation survey meter.

In the event of damage in an auto accident:

1. Attend to injuries.
2. Deny access.
3. Gather details, document actions and take photos.
4. Contact the RSO and/or emergency response number.
5. Wait for instructions or arrival of emergency response.

In the event of theft:

1. Contact the RSO.
2. Call the regulatory agency
3. Immediately contact the police

At the earliest practical moment, the U.S. Department of Transportation's National Response Center will be notified at 800-424-8802 of an accident that occurs during the course of transportation (including loading, unloading and temporary storage) in which fire, breakage, spillage or suspected contamination occurs involving shipment of radioactive materials, in accordance with 49 CFR 171.15.

Health Hazards

**Radiation presents minimal risk to lives of persons during transportation accidents.*

**Undamaged packages are safe; damaged packages or materials released from packages can cause external radiation hazards. Contamination is not expected.*

**Packages identified as "Type A by marking on packages or by shipping papers contain non-life endangering amounts. Radioactive sources may be released if packages are damaged in moderately severe accidents.*

Nuclear gauges present no major health dangers if basic precautions are taken and common sense is used. By following proper procedures and principles of radiation protection, and by helping others do likewise, you can feel comfortable and assured that your workplace is safe.

Step Five - Preparing the Vehicle

Before you secure the gauge in a vehicle you should have all necessary restraints in place. The gauge must be secured inside the vehicle with **two independent controls**. A gauge must be secured, blocked and braced in a storage area of a vehicle. The gauge cannot be transported in an area of the vehicle that has passengers.

Examples of proper storage for different types of vehicles include:

a) Typical passenger automobile – **The gauge must be secured in the trunk**. The first independent control would be the trunk lock. The second independent control would be a locked chain or cable securing the gauge case to the body of the vehicle inside the trunk. You **cannot** transport a gauge in the seat beside or behind you.

b) Van, SUV or station wagon – **The gauge must be secured in the rearmost part of the vehicle**, behind the rearmost passenger seating. The vehicle's door locks would act as the first level of control. An additional locked chain or cable attached to the gauge and inside body of the vehicle would act as the second. Make sure to block and brace the gauge to ensure no movement inside the vehicle. Conceal the case with a blanket or cover.

c) Pick-up truck – **You must use two locked deterrents attached to the gauge case to the body of the vehicle as well as two locked deterrents that prevent anyone from opening the gauge case, such as two locked latches on the outside of the case or one locked latch along with one locked cable wrapped around and overtop the case that likewise prevents opening the case**. The gauge should be blocked and braced to prevent shifting or bouncing and be concealed with a blanket or tarp.

Step Six - Be Nice to the Gauge

Gauges are heavy and seem very solid. Gauge cases also seem to be solidly constructed. But both will break and both are expensive.

Gauges can cost as much as a small car. There is a lot of precision and balance built into a gauge. Banging a gauge around, be it inside or outside the case, will destroy that precision and balance, resulting in repair costs that can run into the thousands of dollars. All gauges come with a drill rod that is used to create a hole for the source rod. **The source rod is not a substitute for a drill rod**. Hitting it with a hammer will bend or break it, which not only leads to a costly repair bill but also results in an incident that must be reported to the regulatory agency.

A gauge inside a case makes for a very heavy and awkward package. Grabbing the handle on the side of the case and dragging the package it to its destination is an easy way to save your back but also an easy way to wear a hole into the base of the cannot be used to transport a gauge. New cases can cost $400.00+. Use a cart or enlist the aid of another person to move the gauge to and from the vehicle.

Gauges are not waterproof. Do not leave them out in the rain or set them in puddles of water. Likewise, internal condensation can have the same effects as rain. The electronics in the gauge will fry if exposed to moisture. The temperature changes a gauge is exposed to can cause condensation. Take steps to “air out” the inside of the gauge. Many gauges have vent ports that can help reduce condensation.

Make sure storage areas are not subject to flooding. Place gauges on pallets or shelves.

Do not let gauges “cook” on a hot asphalt surface. When testing on asphalt never allow the gauge to sit on the surface beyond the test period. The hot temperature can overheat the electronics in the gauge and distort the readings.

Step Seven - Security while in Transport

Security concerns regarding gauges are at an all time high and therefore awareness of security risks are a training priority. Because gauges are portable they are more vulnerable to theft and damage. RSO’s must teach their employees to recognize and respond to security threats.

It is very rare that a thief is targeting the gauge itself. More often the vehicle is the target. That is why regulatory agencies frown on the idea of using the vehicle as a temporary storage area. However, if you must leave the gauge in the vehicle you need to take extra measures in securing your vehicle.

Always park the vehicle in well lit areas and, if possible, behind gated access. If you stop at rest areas and have other workers with you, take turns using the facility. If you stop at a restaurant always keep the vehicle in sight (sit at a window).

Thieves target anything they believe has value. To a thief a gauge case looks like any other tool chest or power-tool box. They’re usually in a hurry and they don’t stop to read the labels and stickers on the case. It is only later that the thief discovers he or she has a device with radioactive materials. At that point they are only interested in

getting rid of the gauge as fast as they can. That's why they're often recovered in ditches, fields and rivers.

Step Eight – Gauges at the Worksite Means Constant Surveillance

Always keep constant surveillance on the gauge while taking tests. Only remove the gauge from the vehicle when you are in the act of taking a test. When the test is finished, immediately return it and secure it in the vehicle. Do not chain it to a telephone pole or some other location that can be accessed by unauthorized individuals.

Step Nine – Temporary Storage in a Vehicle

Once the day is done and you're on your way back make sure to keep all transport security and control requirements in place

When absolutely necessary, you can use the vehicle as a temporary storage area. **The gauge cannot be brought into a hotel or motel, nor can it be stored in a home, garage or local shed or storage area that is not pre-authorized.** Take every means reasonably available to provide the ultimate security for a vehicle that is storing a gauge.

5 Emergency Procedures

5.1 *In the Event of Damage at the Worksite:*

1. Attend to anyone that may have been injured.
2. Determine the location of radioactive sources (typically the source rod).
3. Take control and deny access to the area (15 feet in all directions).
4. If a vehicle is involved keep it on site until it is determined that it is not contaminated.
5. Gather details about accident and damage.
6. Stay at the site but contact RSO with details.
7. If necessary, the RSO will contact the IDPH and police.
8. The RSO will give guidance on whether to move the gauge or;
9. The RSO will travel to the site with a radiation survey meter.

5.2 *In the Event of Damage in a Vehicle Accident:*

1. Attend to injuries.
2. Deny access.
3. Gather details, document actions and take photos.
4. Contact the RSO and/or emergency response number.
5. Wait for instructions or arrival of emergency response.

5.3 *In the Event of Theft:*

1. Contact the RSO.
2. Call the regulatory agency.
3. Immediately contact the police.

A Nuclear Gauge must be attended to at all times when it is in use in the field. It is very unlikely a gauge that is being watched carefully will be stolen or accidently damaged.

6 Gauge Operation

6.1 Standard Counts

Standard counts provide a quick reference check to ensure that your gauge is operating correctly. One of the accessories you receive with a gauge is a standard block, typically a rectangular block of plastic material. Set your gauge on the block and take a standard count. It will measure the number of counts received from the density and moisture sources. The results should be very close to previous standard counts, typically 1% for density and 2% for moisture. Standard counts should be taken every day you use the gauge. Always record the results for use and comparison to future counts.

Remember! If the gauge electronics are turned off, the gauge is still emitting radiation!

The procedure for obtaining a standard count:

1. Turn the gauge on and let it warm up for 20 minutes (**Be aware that some gauge models automatically turn off after approximately 10 minutes to conserve battery power**).
2. Make sure the base of the gauge and the top of the standard block are clean.
3. Place the standard block on a dense, flat surface such as concrete or compacted subgrade or surfacing material (no tailgates).
4. Most standard blocks have a small metal butt plate that rises above the surface of the block. For Troxler gauges, the gauge should be placed on the block with the source rod at the opposite end of the butt plate. Humboldt gauges are just the opposite; the source rod end should be against the butt plate. Make sure to slide the gauge towards and up against the butt plate.
5. The source rod stays in the **safe position** when taking the test.
6. Make sure there are no other gauges within 30 feet.
7. Make sure to take the test in an area away from any large vertical objects including walls, vehicles and people.
8. Take one automatic 4-minute standard count per manufacturer instructions. **This count should be within 1% of the latest standard count established for the gauge.** In the event the standard count varies by more than 1%, make a note of that number, reject that count on the gauge and then obtain another standard count. The two standard count numbers just obtained should be within 1% of each other and within 2% of the latest established standard count. If so, retain and record the last standard count taken.

6.2 Moisture Content and Density of Soils (IM 334)

Buildings and roads are only as good as the foundations they are built upon. Hills have to be flattened and valleys have to be filled. Ideally, you can use the material removed from the hill to fill in the valley. But you must use heavy rolling equipment to compact the soil to create a safe and sturdy foundation for the building or road. And to effectively compact the soil you typically put it down in 4 – 12 inch lifts. Compaction efforts differ depending on the types of soils you are compacting. For example, sandy soils can be easier to compact than clay soils.

The one big advantage you have in determining how well you are compacting the soil is the use of the moisture density gauge. Density measurements have proven to be an excellent indicator of the soils ability to support loads. Density is the mass per unit volume. Wet density, also known as bulk density, typically consists of the soils and moisture evident in the ground that you are compacting. Dry density consists of only the soil solids and is typical of a lab analysis. You will need to correlate the field measurement to the lab measurement and this is best done by subtracting the gauge's moisture measurement reading from the gauge's wet density reading:

Dry density = (Wet density – moisture)

The gauge will automatically make this calculation for you.

The key to maximum density is the percentage of moisture in a given soil. The moisture acts as a bond for the soil. If it is too wet, the water will displace the denser soil particles, no bonding will occur, and you end up with mud. If it's too dry there will be increased friction and you will not achieve the desired bonding. The gauge will help you determine the desired optimum moisture content. The other key factor, pressure applied by the compaction rollers, will allow you to match up to the design criteria.

When taking a test, the gauge measures the amount of radiation detected over a predetermined timeframe, usually one minute. The detector tubes count the radiation that is able to pass through the material between the bottom of the source rod and the detector tubes. The denser the material, the lower the amount of radiation that is able to reach the detector tubes to be counted. The gauge converts these counts into a wet density reading. It is referred to as wet density because the material under the gauge has natural moisture contained in its physical form.

The other radioactive source, Americium 241, embedded in the base of the gauge, measures moisture at the same time the gauge is measuring wet density. The gauge software then automatically adjusts the readings.

When working with a gauge on soil it is wise to follow a few guidelines:

a) When testing on soils always prepare the ground by using the scraper plate to smooth out any obstacles or fill in any voids. This will reduce the chance that open pockets or protruding objects could impact your reading.

b) When using the drill rod always make sure to first place your drill rod removal device – this is something you will probably only forget once!

c) The dimensions of most scraper plates match the base of the gauge that they are paired with. This is a safety feature that, once the hole has been drilled, allows you to create a template for the base of the gauge. Simply etch around the base of the scraper plate before picking it up. You then place the gauge down inside of this etched area. You will find that the opening for the source rod is now positioned over the hole that you drilled. Pull or depress the gauge trigger and drop the rod into the hole. By using this method you will be able to use the gauge without ever visually seeing the source rod. This will ensure that you keep your exposure to gauge radiation to a minimum.

IMPORTANT: Do not extend the source rod to guide it into the hole! This exposes you and others to an unnecessary exposure of radiation.

d) Before taking a test, **pull the gauge towards the side of the hole** with the detector tubes. This ensures that there is no air gap between the source rod and the side of the hole.

e) Make sure that the source rod is well seated in the depth position notch. Any misalignment will impact the results.

f) Always practice good ALARA by returning the source to its safe position before recording your results.

g) Always practice good ALARA by maintaining your distance during the test.

h) Always practice good security by never taking your eyes off the gauge while in operation. This will prevent possible damage from heavy equipment.

i) Never take a test while within 30 feet of another gauge.

j) Never take a test adjacent to large vertical objects, including vehicles and people.

k) After use, always return the gauge to its case and secure the case to the vehicle.

6.3 Asphalt Moisture and Density of Cold-in-Place Recycling (IM 504)

Preparation of the test site is the same as for earthwork except the surface is not scraped.

6.4 PCC Density (IM 358)

The consolidation of concrete is an important factor in its durability. The result obtained from the nuclear gauge is compared to a corrected rodded density test result. The corrected nuclear density must be greater than 98% of the corrected rodded density result. (Standard Specification 2413.03.E.2.g)

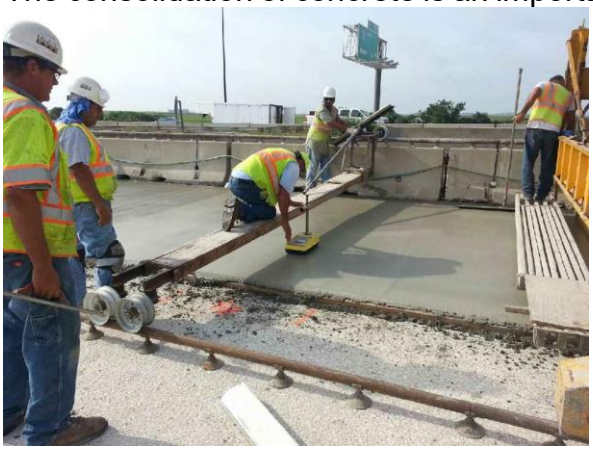

When taking PCC density readings, the moisture content readings are of no consequence.

The source rod is lowered into plastic PCC, typically on a bridge deck, and the gauge measures the amount of radiation detected over a predetermined timeframe, usually one minute. The detector tubes count the radiation that is able to pass through the material between the bottom of the source rod and the detector tubes. The denser the material, the lower the amount of radiation that is able to reach the detector tubes to be counted. The gauge converts these counts into a wet density reading. It is referred to as wet density because the material under the gauge has natural moisture contained in its physical form.

Report this data on Form 821297, *Nuclear Test Report-Density of Plastic P.C. Concrete*. This blank form can be found on the Iowa DOT Web Page, Materials Section at: **www.dot.state.ia.us/materials/index.htm** and clicking “Forms”.

6.5 Some Possible Reasons for Errors in Gauges

There may be nothing more frustrating than a gauge that isn't measuring correctly and there can be plenty of reasons for malfunctioning gauges:

a. **Environmental factors** – Environmental errors are typically out of the control of the operator.

1. Natural hydrogen content – Some soils contain naturally bound hydrogen. The gauge views this natural bound hydrogen as moisture. The natural hydrogen may give a false low dry density reading, which in turn can lead to false low percent compaction. The Proctor procedure may likewise be fooled by the hydrogen. An additional oven dry or microwave test will be needed to recalculate the values. They can be time consuming but necessary.

2. Bad luck of the draw – Sometimes, a spot is specified, through random selection, where a test must be performed. If a "soft" spot is selected it can give a bad representation of the overall job. But, then again, some believe that the job is only as good as its weakest spot.

3. Trench & vertical object errors & corrections – Sometimes you're put in a spot where there is no escape from adjacent vertical walls or objects. These surfaces can reflect back the neutron radiation and give a higher moisture count than actual. You can correct for trench factors by performing a standard count on a normal surface setting and compare to a trench standard count. The difference should be subtracted from the actual trench moisture count.

4. Operator errors – All gauges have small degrees of errors evident in their systems. You can never achieve a perfect level of precision and accuracy because of the very slight mechanical imperfections and electronic drift. But the last thing you need is additional errors due to operator oversights. Don't compromise your readings due to these errors:

- Make sure the source rod is well seated in the depth notch.
- Make sure, once the source rod is extended into the hole, that you pull the gauge and inserted rod against the backside of the hole. This will eliminate any open air space between the rod and soil.
- Make sure the base of the gauge is sitting flush against the ground surface. Use the scraper plate to properly smooth the ground, removing any protruding objects and filling any air voids.
- Make sure to run your standard counts every day you use the gauge.

6.6 Gauge Maintenance Basics

As in the case with most high quality test equipment, moisture density gauges will provide many years of dependable service provided proper maintenance is performed on a periodic basis.

1. The bottom plate of the gauge and the cavity formed by the scraper ring should be cleaned frequently. If the gauge is used in wet sand or concrete, the cavity should be cleaned every day. If you regularly use the gauge in soils clean the cavity when raising and lowering the source rod.
2. **DO NOT apply grease or any lubricant to nuclear gauge source rod**. If the source rod becomes hard to extend or retract, contact your Radiation Safety Officer. Applying grease to source rod will increase the chance of getting small particles into the trigger mechanism.
3. Do not leave nuclear gauge carrying case open to the elements. Moisture can condense inside the nuclear gauge causing damage to the electronics.
4. Keep the nuclear gauge carrying case clean. Just like moisture, small particles of dust can get into the nuclear gauge, which could result in problems with the trigger mechanism and electronics.
5. DO NOT open any part of the nuclear gauge without the permission of the Radiation Safety Officer.
6. Humboldt gauges receive new alkaline batteries at the beginning of every construction season, so there should be no need to replace them. **Troxler gauges use NiCad batteries that will develop a short battery life if the gauge gets recharged too often and without being fully discharged.** Charge the batteries only when necessary! It would also be a good habit to write in the log book every time batteries get recharged. If you observe a gauge requiring frequent recharging, contact your RSO to get fresh batteries installed.
7. An important component of a gauge that requires maintenance is the bottom plate and sliding block located in the bottom plate of the gauge. Typical problems reported as a result of insufficient maintenance include: difficulty in raising and lowering the source rod, improper sliding block operation, and erratic moisture or density counts. Central Materials personnel perform yearly maintenance, if you notice problems with the sliding block, contact your RSO.

The typical portable nuclear gauge license **does not allow you** to perform extensive service and repair to your gauges. Just because you are proficient at electronics or mechanical assembly and you are able to obtain parts, you are expressly forbidden to disassemble a gauge, specifically the source rod. You have to obtain a special license to do so. The additional license carries many extra regulations and requirements.

Safety matters

7 Glossary

Absorbed dose: The quantity of ionizing radiation deposited into a material, including an organ or tissue, expressed in the terms of the energy absorbed per unit mass of material. The basic unit of absorbed dose is the rad or its SI equivalent, the gray (Gy).

Activity (Radioactivity): The rate of decay of a radionuclide, more formally, the number of decays per time. Its SI unit is the Becquerel (Bq) corresponding to one radioactive decay (disintegration) per second; its old unit, the curie (Ci), was originally defined as the activity of 1 gram of radium-226 or 3.7 x 10/10 disintegrations per second.

Acute dose: An acute dose means a person received a radiation dose over a short period of time. Example: 5,000mrem per hour.

Acute effect: Effects in organisms manifest themselves soon after exposure to radiation and are characterized by inflammation, edema, denudation and depletion of tissue, and hemorrhage.

Acute radiation exposure: A radiation exposure that occurs over a relatively short period of time (less than 24 hours).

Acute Radiation Syndrome-"ARS" (Radiation Sickness): A person exposed to radiation will develop ARS only if the radiation dose was very high, penetrating (gamma rays), encompassing the whole body and received in a short period of time.

Agreement State: States that assumed authority under Section 274b of the Atomic Energy Act to license and regulate by-product materials (radioisotopes), source materials (uranium and thorium), and certain quantities of special nuclear materials.

Air Cargo Only label: Two labels are required on opposite sides of the gauge case and next to the Yellow II labels that instruct that gauges can only be shipped on cargo aircraft – no passenger aircraft.

ALARA: "As Low As Reasonably Achievable" – Taking every reasonable safeguard to protect person and public against ionizing radiation exposure.

Alpha particle: A heavy particle emitted form the nucleus of an atom. It consists of two protons and two neutrons, which is identical to the nucleus of a helium atom without electrons. These heavy charged particles lose their energy very quickly in matter. They are easily shielded by clothing, a sheet of paper or the top layer of skin. Alpha particles are only hazardous when ingested. Alpha particles emitted by the radioactive materials in the gauge are permanently shielded and therefore not used in the operation of the gauge.

Americium-241 (Am241): Portable nuclear gauges use a radioactive isotope of Americium, Am241, coupled with beryllium to produce neutron radiation for measuring hydrogen/moisture content.

Atom: The smallest particle of an element that can enter into a chemical reaction.

Atomic Mass: The weight of an atom measured in atomic mass units, typically protons and neutrons.

Atomic Number: The number of protons in the nucleus of an atom and the number of electrons in a neutral atom. This number determines the atom's chemical element.

Atomic Weight: The mass of an atom. Mass is roughly determined by counting the number of protons and neutrons in the nucleus.

Background Radiation: Ionizing radiation that occurs naturally in the environment, including cosmic, terrestrial and radon radiation; also known as natural background radiation.

Becquerel (Bq): An SI unit of measure for activity. One becquerel equals 1 disintegration per second. Typically, becquerels associated with portable gauges, are expressed in billions (GBq) of a becquerel. There are 37,000,000,000 becquerels in 1 curie.

Beta particle: A high speed particle emitted from the nucleus which is identical to an electron. They can have a -1 (electron) or +1 (positron) charge and are effectively shielded by thin layers of metal or plastic. Beta particles are most hazardous when ingested. Beta particles emitted from the radioactive materials in the gauge are permanently shielded and therefore not used in the operation of the gauge.

Bill of Lading: A shipping document required whenever radioactive material is transported or shipped on public highways, waterways, cargo aircraft or rail. It must be readily visible and accessible to the driver.

Certificate of Competent Authority/IAEA Certificate/Special Form Certificate: A certificate that confirms the manufacture and encapsulation of radioactive material into an impervious container. See: Sealed Source.

Cesium 137 (Cs137): Radioactive isotope of Cesium which decays by beta emission into barium 137m, which in turn emits a photon for measuring density. Cs137 has a half-life of 30.17 years.

Chronic exposure: Exposure to a source of radiation over a longer period of time, typically greater than 24 hours.

Contamination (radioactive): Contamination means that radioactive materials are released in the form of solids, gases or liquids into the environment and contaminate people externally, internally or both.

Controlled area/zone: An area where entries, activities and exits are controlled to help ensure radiation protection and prevent the spread of contamination.

Cosmic Radiation: Radiation produced in outer space that enters the earth's atmosphere.

Count: Electronic pulse from a radiation detector tube that indicates an ionizing event. Portable nuclear gauges use Geiger-Muller tubes to detect ionizing events.

CFR: Code of Federal Regulations

Chronic dose: A chronic dose means a person received a radiation dose over a long period of time. Example: 300mrem per year.

Chronic Radiation Exposures: Radiation exposures that occur over extended periods of time (greater than 24 hours). Exposure to natural background is a chronic radiation exposure.

Contamination: Radioactive material distributed and in contact with some person, equipment or area. Requires decontamination efforts.

Critical Mass: The minimum amount of fissile material necessary to achieve a self-sustaining nuclear chain reaction. Nuclear gauges only contain non-fissile material and are therefore not capable of creating a chain reaction.

Curie (Ci): The basic measure of radioactivity equal to an average transformation of 37 billion disintegrations per second. One curie is the approximate activity of 1 gram of radium. Named for Marie and Pierre Curie, founders of radium in 1898.

Decay (Radioactive): The decrease of radioactive material, specifically the emission of alpha and beta particles and gamma electromagnetic energy, with the passage of time.

Decontamination (Radioactive): The reduction or removal of radioactive contamination from a structure, object or person.

Detector (Radiation): A device that is sensitive to radiation and can produce a response signal suitable for measurement or analysis. A radiation survey meter.

Dirty bomb: A radiological dispersal device (RDD). A device designed to spread radioactive material by conventional explosives for malevolent purposes. The objective of such a device would be to cause social disruption and panic.

Dose/Dose Rate: The quantity of ionizing radiation deposited into a material, including an organ or tissue, expressed in the terms of the energy absorbed per unit mass of material. The basic unit of absorbed dose is the rad or its SI equivalent, the gray (Gy). The radiation dose delivered per unit of time.

Dose equivalent: A quantity used in radiation protection to place all radiation on a common scale for calculating tissue damage. Dose equivalent is the absorbed dose in grays multiplied by the quality factor. The quality factor accounts for differences in radiation effects caused by different types of ionizing radiation. The sievert is the unit used to measure dose equivalent.

Dosimeter: A small portable instrument such as a film badge or TLD for measuring and recording the total accumulated dose of ionizing radiation person receives.

Effective dose: A dosimetric quantity useful for comparing the overall health affects or irradiation of the whole body. It takes into account the absorbed doses received by various organs and tissues and weighs them according to present knowledge of the sensitivity of each organ to radiation. It also accounts for the type of radiation and the potential for each type to inflict biological damage. The unit of effective dose is the sievert.

Electromagnetic Radiation: A traveling wave motion that results from changing electric and magnetic fields. Types of electromagnetic waves include short-wave such as x-rays & gamma to ultraviolet, visible & infrared to longer wave such as radar and

radio. The gamma ray photons used in a gauge to measure density is a type of electromagnetic radiation.

Electron: Sub-atomic negatively charged particle with very low mass that orbits the nucleus.

Element: All isotopes of an atom that contain the same number of protons.

Emergency Response Sheet: A document that discusses the precautions and emergency actions pertaining to radioactive gauge during transport. An Emergency Response Sheet must be readily visible and available to the driver during transport. Similar to a Material Data Safety Sheet (MSDS).

Encapsulation/Encapsulated: The shielding that encompasses a radioactive material used in a gauge.

Exposure (Radiation): A measure of ionization in air caused by x-rays or gamma rays only. The unit of measure most often used is the roentgen.

Exposure rate: A measure of the ionization produced in air by x-rays or gamma rays per unit of time, frequently expressed in roentgens per hour.

External exposure/irradiation: An exposure received from a source of ionizing radiation outside of the body. Similar to a chest x-ray in that following exposure the individual is not radioactive. Exposure to gamma radiation from the gauge is an external exposure.

Film badge: Dosimetry monitoring device that uses photographic film to measure a person's radiation dose.

Fissile material: Any material in which neutrons cause a fission reaction.

Fission: The splitting of a nucleus into at least two fragments, accompanied by the release of neutrons and energy. Fission of a nucleus may be initiated by absorption of a neutron or, in some materials, can happen spontaneously.

Fusion: The joining together of two or more less stable nuclei into one more stable nucleus.

Gamma ray photon radiation: High-energy electromagnetic radiation emitted from the nucleus of an atom. Gamma rays have no charge, are very penetrating and are best shielded by lead or steel. Gamma rays can cause internal and external damage. All gamma rays emitted from a given isotope have the same energy, a characteristic that enables scientists to identify which gamma emitters are present in a sample. Gamma rays penetrate tissue farther than do beta or alpha particles but leave a lower concentration of ions in their path to potentially cause cell damage. Very similar to x-rays except that x-rays originate from the outer shell of the atom. The gauge uses gamma ray photons to help measure density.

Geiger-Mueller Detector Tube: A gas filled tube that measures voltage pulses created by ionizing gamma radiation. Used in a gauge to determine density.

Geiger counter: A device that utilizes Geiger-Mueller tubes for detecting and measuring ionizing radiation. Gauges use GM tubes to help measure density.

Genetic effects: Effects from radiation exposure that are seen in the offspring of the individual.

Gray (Gy): This SI unit is used to measure a quantity called absorbed dose. This relates to the amount of energy actually absorbed in some material and is used for any type of radiation and any material. It does not describe the biological effects of the different radiations. One gray is equivalent to 100 rads.

Half-life: The time during which one-half of a given quantity of a radionuclide undergoes radioactive decay into another nuclear form. A half-life can last from millionths of a second to billions of years.

HAZ-MAT Training: Hazardous Materials training required for all individuals preparing or transporting gauges. Initial training is covered in the Gauge Safety Certification class and must be renewed every year.

Helium-3 Detector Tube: A helium-3 gas filled tube used to measure thermalized neutrons. Used in a gauge to determine moisture content.

IAEA: International Atomic Energy Agency.

IAEA Certificate/Certificate of Competent Authority/Special Form Certificate: A certificate that confirms the manufacture and encapsulation of radioactive material into an impervious container. See: Sealed Source.

Irradiation: Exposure to radiation.

Ingestion: Swallowing radionuclides by eating or drinking.

Inhalation: Breathing in radionuclides.

Internal exposure: An exposure received from a source of ionizing radiation inside of the body.

Inverse Square Law: The relationship that states that electromagnetic radiation intensity is inversely proportional to the square of the distance from a point source. In other words, roughly speaking, as you double your distance from a radioactive source your exposure is reduced to ¼.

Ion: A charged atom or particle. An atom that has fewer or more electrons than protons. Nuclear radiation can cause ionization.

Ionization: A process in which an atom loses or gains one or more electrons thereby forming an ion.

Ionizing radiation: Radiation that is sufficiently energetic to ionize the matter (remove electrons from the atoms thereby producing ions) through which it moves. Alpha, beta, gamma and neutron are all forms of ionizing radiation.

Irradiation: Exposure to radiation.

Isotope: A variation of a element with the same number of protons, but different number of neutrons.

Leak Test/Wipe Test: A required test for all gauges to ensure that radioactive contaminants are not escaping the special form encapsulation.

Lethal dose (50/30): The dose of radiation expected to cause death within 30 days to 50% so exposed without medical treatment. The generally accepted level for a lethal dose is 400rem over a short period of time.

Millirem (mrem): One one-thousandth (1/1000) of a REM.

Molecule: A combination of two or more atoms that are chemically bonded. A molecule is the smallest unit of a compound that can exist by itself and retain all of its chemical properties.

Natural background radiation: Radiation that exists naturally in the environment. It includes cosmic and solar radiation, radiation radioactive materials present in rocks and soil, and radioactivity that is inhaled or ingested.

Neutron: Neutral sub-atomic particle located in the nucleus of an atom/element.

Non-Agreement State: A state under the direct rules and regulations of the NRC.

Nondestructive testing: Testing that does not destroy the object under examination.

Non-ionizing radiation: Having lower energy and longer wavelengths than ionizing radiation it is not strong enough to affect the structure of atoms, but it is strong enough to heat tissue and cause harmful biological effects. Examples are radio waves, microwaves, visible light and infrared.

Notice to Employees Poster: A required information poster that must be available/posted for all employees of a company using gauges. This poster can be obtained from the licensing agency.

NRC: Nuclear Regulatory Commission. Federal licensing and regulatory body that oversees the use of radioactive materials in the United States.

Nuclear energy: The heat energy produced by the process of nuclear fission within a nuclear reactor or by radioactive decay.

Nuclear reactor: A device in which a controlled, self-sustaining nuclear chain reaction can be maintained with the use of cooling to remove generated heat.

Nucleus: The central part of an atom that contains the neutrons and protons. The nucleus is the heaviest part of the atom.

Occupational exposure: Radiation exposure obtained during work around a gauge.

Penetrating radiation: Radiation that can penetrate the skin and reach internal organs and tissues. Photons (x-rays & gamma rays) and neutrons are penetrating radiations. Alpha and beta particles are not considered penetrating radiation.

Photon: A discrete packet of pure electromagnetic energy that, when interacting at the molecular or atomic level, acts more like a particle rather than an energy wave. Photons have no mass and travel at the speed of light. Gamma rays and x-rays are photons.

Placards/Placarding: Radioactive III labels that must be used displayed on the outside of a vehicle for higher quantity devices. Moisture density gauges are Radioactive II and

therefore do not require placarding. DO NOT PLACARD A VEHICLE that is transporting a moisture density gauge.

Proton: A small positively charged particle found in the nucleus. The number of protons in a given atom determines the chemical identity of the element.

Quality Factor (QF): A numerical factor describing the average effectiveness of a particular type or energy of radiation in producing biological effects on humans. The multiplier assigned to a given type of radiation. Multiply the QF times rad to determine rem. A factor that converts the absorbed dose (rad) to biological damage/dose equivalent (rems).

Rad (radiation absorbed dose): A basic unit of absorbed dose that measures the energy absorbed by the body. It does not describe the biological effects of different radiations. One rad equals the dose delivered to an object of 100 ergs of energy per gram of material. It is being replaced by the gray (Gy), which is equivalent to 100 rad.

Radiation: Energy in transit in the form of high speed particles and electromagnetic waves. Electromagnetic waves, including visible light, radio, television, ultra violet (UV) and microwaves, are all types of radiation that do not cause ionizations of atoms because they do not carry enough energy to separate molecules or remove electrons form atoms. These are all forms of non-ionizing radiation. Ionizing radiation is a very high energy form of electromagnetic radiation that has enough energy to remove tightly bound electrons from their orbits around atoms. Alpha, beta, gamma ray and neutron radiation are all ionizing radiation.

Radiation dose: The quantity of radiation energy deposited into an object or medium, divided by the mass of the object or medium. The radiation dose is ionizing radiation. Ionizing radiation doses can be expressed as an absorbed dose, equivalent dose, or effective dose. The basic unit of absorbed dose is the rad or its SI equivalent, the gray (Gy).

Radiation exposure: The act of being exposed to radiation. Also referred to as irradiation. Formally in radiation detection and measurement, radiation exposure is related to the ability of photons to ionize air.

Radiation sickness: See Acute Radiation Syndrome (ARS).

Radiation source: Radioactive material packaged to use the radiation it emits.

Radiation warning symbol: A universally recognized magenta or black trefoil on a yellow background that must be displayed where radioactive materials are present or where certain doses of radiation could be received.

Radioactive: Elements that are unstable and transform spontaneously (decay) through the emission of ionizing radiation, a process known as radioactive decay.

Radioactive contamination: Radioactive material distributed and in contact with some person, equipment or area. Requires decontamination efforts.

Radioactive decay: The spontaneous disintegration of the nucleus of an atom.

Radioactive material: Any material that contains radioactive atoms.

Radioactivity: Process of spontaneous transformation/breakdown of the nucleus, generally with the emission of alpha or beta particles, usually accompanied by gamma rays. This process is described as decay of the atom.

Radiography: The use of radiation to create images of a subject, especially the internal features of a subject. An example of medical radiography is a dental x-ray. Industrial radiography includes x-rays of pipes and reinforced concrete construction.

Radioisotope: Isotopes of an element that have an unstable nucleus.

Radiological: Related to radioactive materials or radiation. The radiological sciences focus on the measurement and effects of radiation.

Radiological dispersal device (RDD): Also known as a dirty bomb. A device to spread radioactive material for malevolent purposes. The objective of such a device would be to cause social disruption and panic.

Radionuclide: An atom with an unstable nucleus which undergoes radioactive decay. A radioactive nuclide.

Radium: A naturally occurring radioactive material (NORM) formed by the decay of uranium and thorium. It occurs at low levels in virtually all rock, soil, water, plants and animals. Radon is a decay product of radium.

Radon: A naturally occurring radioactive gas found in rock, soil and water throughout the United States. Radon is the largest source of exposure to people from naturally occurring radiation.

Regulations: The rules and requirements of a license. All license holders must maintain, review and update a copy of the regulations from their regulatory agency.

REM (Roentgen equivalent, man): The special unit of dose equivalent. Not all radiation has the same biological effect, even for the same amount of absorbed dose. The dose equivalent in rem is equal to the absorbed dose in rad multiplied by the quality factor that accounts for the biological effect of the radiation. (1 rem = 0.01 sievert). This relates the absorbed dose in human tissue to the effective biological damage of the radiation. To determine the equivalent dose (in rem) you multiply the absorbed dose (rad) times the quality factor (QF).

RQ – Reportable Quantity: An EPA designation that establishes thresholds for quantities of radioactive materials used in gauges. An RQ designation must appear on the Type A Package Label and shipping papers for gauges that contain Am241 in excess of 10mCi. All moisture density gauges exceed this limit and must therefore show the designation.

Roentgen: A unit of measure to exposure to gamma and x-rays. It is that amount of gamma or x-rays required to produce ions carrying 1 electrostatic unit of electrical charge in 1 cubic centimeter of dry air under standard conditions. Named for Wilhelm Roentgen, discoverer of x-rays in 1895.

Safety: Prevention of damage, human error and other inadvertent acts that result in accidental radiation exposure.

Sealed source: A radioactive source, sealed in an impervious container that has sufficient mechanical strength to prevent contact with and dispersion of the radioactive material under the conditions of use and wear for which it was designed. May be classified “Special Form” on shipping papers and packages.

Security: Prevention of theft, sabotage and other malevolent acts involving radiation sources.

Shielding: Any effective material between a radiation source and a potentially exposed person that reduces exposure.

SI: International System of Units, also known as the metric system.

Sievert (Sv): The sievert is a SI unit used to derive a quantity called dose equivalent or equivalent dose. This relates the absorbed dose in human tissue to the effective biological damage of the radiation. Not all radiation has the same biological effect, even for the same amount of absorbed dose. To determine equivalent dose (Sv), you multiply absorbed dose (Gy) by a quality factor (QF) that is unique to the type of incident radiation. One sievert (sv) is equivalent to 100rem.

Special Form Certificate: A certificate that confirms the manufacture and encapsulation of radioactive material into an impervious container. See: Sealed Source.

Special form radioactive material: Defined in 10 CFR Part 71 as radioactive material that exists as a single solid piece or is encapsulated material that meets certain other requirements.

Stable nucleus: The nucleus of an atom in which forces among its particles are balanced.

Stochastic effect: An effect regardless of dose that assumes there is always some small probability of adverse effects. The effect increases with dose. Cancer is a stochastic effect.

Survey meter: A device used to detect and measure the presence of ionizing radiation.

TEDE - Total Effective Dose Equivalent: The sum of effective dose equivalent from external radiation and the committed effective dose inhaled and ingested radioactive material. Quoted in units of rem.

Terrestrial radiation: Radiation emitted by naturally occurring radioactive materials in the earth. Examples: Uranium, thorium & radon.

TLD: Thermoluminescent Dosimeter. Personnel dosimetry used to measure radiation dose.

Total Body Radiation Syndrome: The response of an organism to acute total body radiation exposure to all organs constituting the organism.

Total Effective Dose Equivalent (TEDE): See TEDE

Type A Package: The approved case that the gauge must be stored and shipped in.

Type A Package Label: A label that indicates the type of case used to store and ship the gauge.

Unstable nucleus: A nucleus that contains an uneven number of protons and neutrons and seeks to reach equilibrium between them through radioactive decay. Example: The nucleus of a radioactive atom.

Whole Body Count: The measure and analysis of the radiation being emitted from a person's entire body, detected by a counter external to the body.

Whole Body Exposure: An exposure of the body to radiation, in which the entire body, rather than an isolated part, is irradiated by an external source.

X-ray: Electromagnetic radiation emitted from the outer shell of the atom. Is best shielded by lead or steel. Can cause external or internal hazards.

Yellow II Radioactive Label: The radioactive label designated for gauges, two of which must adorn opposite sides of the gauge case. The label must display the hazard class(7), contents(Cs137 & Am241), activity in becquerels & millicuries, and Transport Index (TI).

PROCEDURES MANUAL

NUCLEAR MOISTURE-DENSITY GAUGE OPERATIONAL AND SAFETY PROCEDURES MANUAL

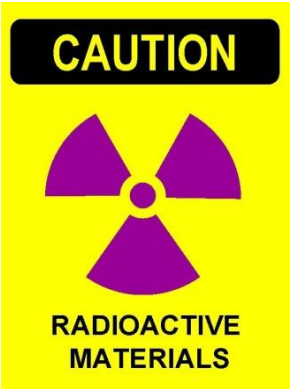

OFFICE OF CONSTRUCTION AND MATERIALS January 2020

SCOPE

This manual describes the operational safety procedures to be followed when using Nuclear Moisture–Density Gauges under the control of the Iowa Department of Transportation. This manual must be used in conjunction with the appropriate IMs in effect regarding testing when using a Nuclear Moisture–Density Gauge.

TABLE OF CONTENTS

I. FIRM LOCATION.....3
- a. Address.....3
- b. Contacts.....3

II. GAUGE DESCRIPTION.....4
- a. Troxler Surface Moisture-Density Gauges.....4
- b. Humboldt Nuclear Moisture-Density Gauges.....4

III. STORAGE FACILITIES.....5
- a. Permanent Location.....5
- b. Temporary Locations.....5-6
- c. Storage in Vehicle.....6

IV. FIRE PROTECTION.....7

V. OPERATOR'S QUALIFICATIONS.....7

VI. EXPOSURE MONITORING PROCEDURES.....8

VII. OPERATING AND EMERGENCY PROCEDURES.....8-9
- a. Operating Procedures.....8
- b. Emergency Procedures.....8-9

VIII. INVENTORY INFORMATION.....9
- a. Utilization Log Book.....9
- b. Documents Provided with each Gauge.....9

IX. INVENTORY CONTROL.....9

X. SERVICE.....10

XI. LEAK TESTS.....10

XII. DISPOSAL.....10

XIII. EMERGENCY RESPONSE INFORMATION.....11

Appendix A Iowa Department of Public Health Materials License.....12-14

Appendix B Material Safety Data Sheet Exemption.....15

OPERATIONAL AND SAFETY PROECEDURES TO BE FOLLOWED WHEN USING NUCLEAR MOISTURE-DENSITY GAUGE

I. FIRM LOCATION

A. Address

Iowa Department of Transportation
Office of Construction and Materials
800 Lincoln Way
Ames, IA 50010

B. Contacts

Rodney Graven
Radiation Safety Officer
Office of Construction and Materials
Iowa Department of Transportation
800 Lincoln Way
Ames, IA 50010
515-233-7743
515-370-2166

Stephen Upchurch
Electronic Engineering Technician
Office of Construction and Materials
Iowa Department of Transportation
800 Lincoln Way
Ames, IA 50010
515-239-1502

II. GAUGE DESCRIPTIONS

A. Two (2) Troxler Surface Moisture-Density Gauges, Model No. 3440

Radiological Specifications

Gamma Source: 8 mCi ±10% Cesium-137

Neutron Source: 40 mCi ±10% Americium-241: Beryllium

Source Housing: Stainless steel encapsulation

Shielding: Tungsten, lead and cadmium

Surface Dose Rates: 20.5 mrem/hr max., neutron and gamma

Source Rod Material: Stainless steel

Shipping Case: DOT 7A, Type A

Source Seal Approval, Domestic and International Shipment: Special Form

B. Seven (7) Humboldt Moisture-Density Gauges, Model No. 5001

Radiological Specifications

Gamma Source: 10 mCi ±10% Cesium-137

Neutron Source: 40 mCi ±10% Americium-241: Beryllium

Source Housing: Stainless steel encapsulation

Shielding: Tungsten, lead and cadmium

Surface Dose Rates: 17.3 mrem/hr max., neutron and gamma

Source Rod Material: Stainless steel

Shipping Case: DOT 7A, Type A

Source Seal Approval, Domestic and International Shipment: Special Form

C. One (1) Instrotek/CPN Moisture-Density Gauge, Model MC-3 Elite

Radiological Specifications

Gamma Source: 10 mCi ±10% Cesium-137

Neutron Source: 50 mCi ±10% Americium-241: Beryllium

Source Housing: Stainless steel encapsulation

Shielding: Tungsten, lead and cadmium

Surface Dose Rates: 16.0 mrem/hr max., neutron and gamma

Source Rod Material: Stainless steel

Shipping Case: DOT 7A, Type A

Source Seal Approval, Domestic and International Shipment: Special Form

III. STORAGE FACILITIES

A. Permanent Location – Materials Laboratory - Ames

1. The building is rigidly constructed, with adequate fire safety equipment.
2. The gauges are stored in a separate room. The area is kept locked and secured at all times with keys available only to licensed operators. In addition, the gauge's source rod is kept locked when not in use.
3. The room is posted with appropriate radiation warning signs.
4. The building is locked and secured during non-working hours.
5. The facility meets with the approval of the Radiation Safety Officer.
6. The name and phone number of the Radiation Safety Officer and his designated alternate who can be contacted in case of emergency are posted.
7. The facility shall always be subject to inspection for compliance to these requirements.

B. Temporary Locations

1. The building shall be rigidly constructed, with adequate fire safety equipment.
2. The gauge(s) will be stored in a separate room. The area will be kept locked and secured at all times with keys available only to licensed operators. In addition, the gauge's source rod is kept locked when not in use.
3. The room will be posted with appropriate radiation warning signs.
4. The building will be locked and secured during non-working hours. If available, security guards will make rounds to check on above.
5. The facility will be inspected by and meet the approval of the Radiation Safety Officer.
6. The building superintendent will be given the name, address and phone number of the Radiation Safety Officer and his designated alternate who can be contacted in case of emergency.
7. The facility shall always be subject to inspection for compliance to these requirements.
8. Temporary locations may include:

<u>District One - Resident Construction Offices</u>

1308 Iowa Avenue West Marshalltown, IA 50158	512 West Clark Jefferson, IA 50129	2300 Southeast 17th St. Grimes, IA 50111

<u>District Two - Materials</u>

428 43rd Street SW
Mason City, IA 50401

<u>District Two - Resident Construction Offices</u>

2224 225th Street
New Hampton, IA 50659

District Three - Materials
4621 US 75 North
Sioux City, IA 51108

District Three - Resident Construction Office

1833 Industrial Road North
Cherokee, IA 51012

4611 US 75 North
Sioux City, Iowa 51108

District Four - Materials
2310 East 7th Street
Atlantic, IA 50022

District Four - Resident Construction Offices

3538 S. Expressway
Council Bluffs, IA 51501

701 East Taylor
Creston, IA 50801

District Five - Materials
301 West Briggs
Fairfield, IA 52556

District Five - Resident Construction Offices

US 34 West
Chariton, IA 50049

205 East Taft Street
Mount Pleasant, IA 52641

District Six - Materials
5455 Kirkwood Blvd.
Cedar Rapids, IA 52404

District Six - Resident Construction Offices

1009 West Main Street
Manchester, IA 52057

8721 NW Blvd.
Davenport, IA 52809

14117 IA RTE 136 North
Dyersville, IA 52040

C. Storage in Vehicle

1. If the gauge is going to be stored overnight in vehicle the following conditions must be met:
   a. Prior approval by the Radiation Safety Officer will be necessary.
   b. Vehicle must be locked with the gauge adequately secured. In an open bed vehicle, the gauge shall be secured inside the cab of the vehicle.
   c. Vehicle must be kept at same location as where certified operator is staying. In addition, the vehicle must be parked in a well-lighted area for security reasons.
   d. At no time shall the gauge be taken inside a private residence or a motel room overnight.
   e. If an accident occurs with vehicle follow conditions under Emergency Procedures.

IV. FIRE PROTECTION

A. Building is of non-combustible construction.

B. The walls are concrete block construction.

C. The ceiling and floors are reinforced concrete.

D. Fire extinguishers are mounted on nearby walls.

E. Building conforms to existing State regulations and Codes.

Note: An engineering evaluation of the likelihood of source retention in the source housing following a severe accident involving fire was conducted.
The results of the testing showed: (1) No loss of the shielding integrity of the device at temperatures below 250°C (482°F). Although a 250°C temperature would not, based on the ANSI classification of the source capsule, result in leakage of radioactive material, such a temperature would melt the epoxy used to "cold weld" the source cup into the source rod. At this temperature, there would be no loss of shielding around the Cs-137 capsule. The capsule would remain within the source rod, being held there by the threads. At temperatures over 327°C (621°F), the lead surrounding of the Americium-241:Beryllium source capsule would melt. Though this would result in a loss of shielding to some degree, it is below the temperature rating for the source capsule. The results of the prototype testing and engineering analysis support the assignment of an ANSI standard rating of ANSI-54-164-154-R1.

V. OPERATOR'S QUALIFICATIONS

A. To become a certified operator, the individual must have satisfactorily completed the DOT's course given by the Radiation Safety Officer. The operators will be trained on the following topics:

1. Nature of sources.
2. Operation of equipment.
3. Safety procedures for normal operation.
4. Emergency procedures.
5. Packaging and shipping of gauges.
6. Radiation exposure factors.
7. Occupational dose limits.
8. Radiation monitoring.
9. Film badge usage.
10. Reporting malfunction or problems.
11. Emergency procedures.

B. Certified individuals must be a full-time employee, over the age of 19, of the Iowa Department of Transportation to be certified to operate gauges licensed under the Iowa Department of Transportation by the Iowa Department of Public Health. Any female, known to be pregnant, is prohibited from operating a gauge.

C. The Radiation Safety Officer will issue a certificate of training upon successful completion of the course to operators.

VI. EXPOSURE MONITORING PROCEDURES

A. Each certified operator who operates a gauge at any time during a yearly quarter is provided with a monitoring TLD (Thermo Luminescent Dosimeter) badge which is to be submitted to Troxler Radiation Monitoring Services, Research Triangle Park, North Carolina for analysis of gamma and neutron dosage.

B. A record of exposure information is maintained and monitored by the Radiation Safety Officer.

C. Any unusually high dosages (more than 20 mrem per quarter) will be investigated by the Radiation Safety Officer.

VII. OPERATING AND EMERGENCY PROCEDURES

A. Operating Procedures.

1. Operator(s) are required to wear a film badge when using or transporting gauge.
2. Keep the source rod in the "safe" or stored position when not in use (this includes from one test location to another).
3. While exposure dose levels are well within limits for radiation workers, never expose yourself to the bare source without sufficient justification for the additional dose.
4. Keep all unauthorized persons out of operating area. Suggested distance is 15 ft.
5. Maintain security of the instrument at all times. The source lock shall be in place any time the gauge is not in use.
6. The gauge shall be kept in carrying case (shipping case – DOT 7A, Type A, Yellow II Label, 0.1 Transport Index) with the source rod locked while in transit. It must be transported only by a certified operator in an approved vehicle.
7. While being transported in a vehicle, the gauge shall be located in an area as far away from any person(s) as possible (trunk of sedan, back of station wagon/SUV or back of a pickup bed).
8. The vehicle transporting the gauge must be kept locked when unoccupied.
9. If an accident occurs with vehicle while transporting gauge, follow conditions under Emergency Procedures.

B. Emergency Procedures

In the event of damage at the work site:

1. Attend to anyone that may have been injured.
2. Determine the location of radioactive sources (typically the source rod).
3. Take control and deny access to the area (15 feet in all directions).
4. If a vehicle is involved keep it on site until it is determined that it is not contaminated.
5. Gather details about accident and damage – if possible, perform radiation survey.
6. Stay at the site but contact RSO with details.

7. If necessary, the RSO will contact the IDPH and police.
8. The RSO will give guidance on whether to move the gauge or;
9. The RSO will travel to the site with a radiation survey meter.

In the event of damage in an auto accident:

1. Attend to injuries.
2. Deny access.
3. Gather details, document actions and take photos.
4. Contact the RSO and/or emergency response number.
5. Wait for instructions or arrival of emergency response.

In the event of theft:

1. Contact the RSO.
2. Call the regulatory agency.
3. Immediately contact the police.

At the earliest practical moment, the U.S. Department of Transportation's National Response Center will be notified at 800-424-8802, of an accident that occurs during the course of transportation (including loading, unloading and temporary storage) in which fire, breakage, spillage or suspected contamination occurs involving shipment of radioactive materials, in accordance with 49 CFR 171.15.

VIII. INVENTORY INFORMATION

A. Utilization Log Book – information recorded is as follows:

1. Model and serial number
2. Date gauge is removed from and returned to storage.
3. Name of operator or transporter.
4. Destination.

B. Documents provided with each gauge:

1. Nuclear Moisture-Density Gauge Safety Procedures Manual.
2. Copy of license issued by the Iowa Department of Public Health with amendments. (Included with the Safety Procedures Manual)
3. Gauge operator's manual.
4. Most recent gauge calibration sheets.

IX. INVENTORY CONTROL

A. A record is kept by Radiation Safety Officer showing where gauges are located at all times.
B. Every 6 months, a thorough inventory is done to check gauges for usage and condition.
C. Every 12 months, an audit is performed. Summaries of exposure reports, leaks tests and training are included along with radiation survey results from the Nuclear Vault area.

X. SERVICE

A. All service to gauges will be done by Stephen Upchurch, Electronic Engineering Technician in the Office of Construction and Materials. As stated in the DOT's Radioactive Materials License (0066-1-85-PG), source rod removal can only be performed by Stephen Upchurch.

B. At **no time** will any service be done by the operator.

XI. LEAK TESTS

A. The leak test is administered and monitored by the Radiation Safety Officer on a yearly basis.

B. The testing is done using an approved kit supplied by Humboldt Scientific, Troxler Electronics Laboratories or any company licensed to provide the service.

C. A test paper supplied with the kit shall be wetted with isopropyl alcohol prior to wiping the two radioactive sources in the gauge. The test paper is then placed in plastic envelopes on which the following information is recorded:

1. Company name.
2. Address.
3. Gauge Model.
4. Gauge Serial Number.
5. Source Serial Numbers.
6. Date of test.

D. The plastic envelope is placed in a shipping envelope along with leak test analysis form which also contains the above information which is then shipped to Humboldt Scientific, Troxler Electronic Laboratories, Inc. or to any company which is licensed to provide such services, for analysis.

XII. DISPOSAL

A. Any gauge which is no longer of use to the Iowa Department of Transportation will be returned to a current nuclear gauge manufacturer for disposal.

XII. EMERGENCY RESPONSE INFORMATION

Emergency Response Numbers:
515-233-7743 or **515-370-2166** Rodney Graven, RSO
800-535-5053 Humboldt 24 Hour Emergency Response Number
919-549-9539 Troxler 24 Hour Emergency Response Number
800-535-5053 InstroTek 24 Hour Emergency Response Number
515-281-3478 or 515-323-4360 (after normal working hours) Iowa Department of Public Health

POTENTIAL HAZARDS

IMMEDIATE HAZARDS TO HEALTH

- External radiation hazard from unshielded radioactive material.
- Low-level radioactive material; little personal radiation hazard when shielded.
- Materials in special form are not expected to cause contamination in accidents.
- Some radioactive materials cannot be detected by commonly available instruments.
- Potential internal radiation hazard from inhalation, ingestion, or breaks in skin, only if special form capsule is breached.

FIRE OR EXPLOSION

- No risk of fire or explosion.
- Radioactivity does not change flammability or other properties of the materials.

EMERGENCY PROCEDURES

IMMEDIATE PRECAUTIONS

- Isolate hazard area to within a 10-15 foot radius of the device and restrict access.
- Emergency response actions may be performed prior to any measurement of radiation; limit entry to shortest time possible.
- Notify local authorities and Radiation Control Authority of accident conditions.
- Detain uninjured persons; isolate equipment with suspected contamination and delay cleanup until receiving instruction from Radiation Control Authority.

FIRE

- Do not move damaged containers; move undamaged containers out of fire zone.
- Small Fires: Dry chemical, CO_2, water spray, or regular foam.
- Large Fires: Water spray, fog (flooding amounts).

SPILL OR LEAK

- Do not touch damaged containers or exposed contents.
- Damage to outer container may not affect primary inner container.
- Special form capsules are not expected to leak as a result of an accident or fire.

FIRST AID

- Use first aid treatment according to the nature of the injury.
- Advise medical personnel that victim may be contaminated with low-level radioactive material.
- Except for the injured, detain persons exposed to radioactive material until arrival or instruction of Radiation Control Authority.

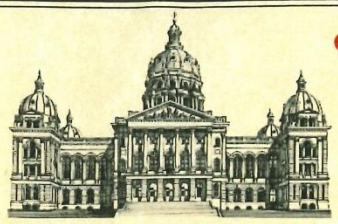

STATE CAPITOL OF IOWA DES MOINES, IOWA

IOWA DEPARTMENT OF PUBLIC HEALTH

MATERIALS LICENSE

Pursuant to Chapter 136C of the Iowa Code and 641-37 through 45 (136C) of the Iowa Administrative Code and in reliance on statements and representations heretofore made by the licensee, a license is hereby issued authorizing the licensee to receive, acquire, possess, and transfer radioactive materials designated below; to use such material for the purpose(s) and at the place(s) designated below; to deliver or transfer such material to persons authorized to receive it in accordance with the rules of the applicable chapter(s). This license is subject to all applicable rules and orders of the Iowa Department of Public Health including the Iowa Rules for Radiation Machines and Radioactive Materials [641-37 through 45] now or hereafter in effect, and to any conditions specified below.

Licensee

1. Iowa Department of Transportation
2. 800 Lincoln Way
   Ames, Iowa 50010

In accordance with the application dated ***June 14, 2018***, License No.: 0006-1-85-PG is ***amended*** to read as follows:

3. **License Number:** 0006-1-85-PG ***Amendment 02***
4. **Expiration Date:** April 1, 2022

5. Byproduct, Source, Special Nuclear and/or Natural Occurring or Accelerator Produced Radioactive Material	6. Chemical and/or Physical Form	7. Maximum Amount that Licensee May Possess At Any One Time Under This License
A. Cesium-137	A. Sealed Source(s) (Troxler Drawing No. A-102112)	A. No single source to exceed 9 millicuries. Total activity not to exceed 18 millicuries.
B. Americium-241:Be	B. Sealed Source(s) (Troxler Drawing No. A-102451 or C-106580)	B. No single source to exceed 44 millicuries. Total activity not to exceed 88 millicuries.
C. Cesium-137	C. Sealed Source(s) (Humboldt Scientific, Inc. model number 2200064)	C. No single source to exceed 11 millicuries. Total activity not to exceed 77 millicuries.
D. Americium-241:Be	D. Sealed Source(s) (Humboldt Scientific, Inc. model number 2200067)	D. No single source to exceed 44 millicuries. Total activity not to exceed 308 millicuries.

MATERIALS LICENSE

Supplementary Sheet

License No. 0006-1-85-PG
Amendment 02

E. Cesium-137	E. Sealed Source(s) (CPN Model CPN-131)	E. No single source to exceed 10 millicuries. Total activity not to exceed 10 millicuries.
F. Americium-241:Be	F. Sealed Source(s) (CPN Model CPN-131)	F. No single source to exceed 50 millicuries. Total activity not to exceed 50 millicuries.

8. Authorized Use

A. & B. To be used in a Troxler, model 3440 gauge to analyze moisture and density of materials. The licensee is authorized for two (2) devices.

C. & D. To be used in a Humboldt Scientific, Inc., model 5001 series gauge to analyze moisture and density of materials. The licensee is authorized for seven (7) devices.

E. & F. To be used in a CPN International., model MC series PORTAPROBE® gauge to analyze moisture and density of materials. The licensee is authorized for one (1) device.

CONDITIONS

9. Licensed material shall be stored only at the licensee's facilities located at 800 Lincoln Way, Ames, Iowa or the District and Resident Offices listed in Item 10 of the application dated May 12, 2017, and may be used at temporary job sites of the licensee anywhere in the State of Iowa where the Iowa Department of Public Health maintains jurisdiction for regulating the use of licensed material.

10. Licensed material shall only be used by, or under the supervision and in the physical presence of, individuals who have received the training described in application dated February 17, 2017 and have been approved in writing by the Radiation Safety Officer. The licensee shall maintain records of individuals designated as users for five (5) years following the last use of licensed material.

11. The Radiation Safety Officer for licensed activities is ***Rodney Graven***.

12. When performing tests at temporary job sites, the authorized user shall not leave the nuclear gauge unattended. Upon completion of tests, the device shall be secured in the licensee's vehicle or a secure building to prevent loss, theft, or unauthorized use.

STATE CAPITOL OF IOWA DES MOINES, IOWA

Iowa Department of Public Health

MATERIALS LICENSE

Supplementary Sheet

License No. 0006-1-85-PG
Amendment 02

13. A. Any cleaning, maintenance, or repair of the gauge(s) that requires removal of the source rod shall be performed only by the manufacturer or by other persons specifically licensed by the U.S. Nuclear Regulatory Commission or an Agreement State to perform such services.

    B. Source rod removal by the licensee shall only be performed by Steve Upchurch.

14. Each portable nuclear gauge shall have a lock or outer locked container designed to prevent unauthorized or accidental removal of the sealed source from its shielded position. The gauge or its container must be locked when in transport, storage or when not under the direct surveillance of an authorized user.

15. The licensee is authorized to transport licensed material only in accordance with the provisions of 641-39.5(136C), "Packaging and Transportation of Radioactive Material."

16. The licensee shall conduct a physical inventory of all sealed sources received and possessed under the license at intervals not to exceed six (6) months and retain each inventory record for five (5) years. The inventory record shall contain the identity and estimated activity of each radionuclide, the model number of each source, and serial number if one has been assigned the location of each source, date of the inventory, and the signature of the Radiation Safety Officer.

17. Notwithstanding requirements in 641-40.32(136C), the licensee is authorized to perform leak tests on the sealed source(s) listed in Item(s) 6.A., B., C., D., E. and F. at intervals not to exceed twelve (12) months.

18. Except as specifically provided otherwise in this license, the licensee shall conduct its program in accordance with the statements, representations, and procedures contained in the documents, including any enclosures, listed below. The Iowa Department of Public Health's rules shall govern unless the statements, representations, and procedures in the licensee's application and correspondence are more restrictive than the rules.

    A. Application dated February 17, 2017 (with attachments).

    B. Application dated May 12, 2017 (with attachments).

    C. Application dated June 14, 2018 (with attachments).

For the Iowa Department of Public Health

Date 6-19-2018 By Randal S. Dahlin
Radioactive Materials Program

Date 6-19-2018 Concurrence Stuart R. Jordan
Stuart R. Jordan
Radioactive Materials Program

MATERIAL SAFETY DATA SHEET EXEMPTION

Material Safety Data Sheets (MSDS) are not required for our gauges.

Radioactive materials are exempt from coverage under the OSHA's Hazard Communication Standard (HCS) if the only hazard they pose is radiological. Since the only hazard posed by the radioactive sealed sources in nuclear gauges is radiological (they do not present any other physical or chemical hazards) they are exempt from the HCS. This means that Materials Safety Data Sheets are not required.

Excerpts from the OSHA regulations which exempt the radioactive sealed sources from MSDS requirements are shown below:

29 CFR 1910.1200, Section(b) "Scope and application."

(b)(1)
This section requires chemical manufacturers or importers to classify the hazards of chemicals which they produce or import, and all employers to provide information to their employees about the hazardous chemicals to which they are exposed, by means of a hazard communication program, labels and other forms of warning, safety data sheets, and information and training. In addition, this section requires distributors to transmit the required information to employers. (Employers who do not produce or import chemicals need only focus on those parts of this rule that deal with establishing a workplace program and communicating information to their workers.)

1910.1200(b)(6)
This section does not apply to:

(b)(6)(xi)

Ionizing and nonionizing radiation;

INSTRUCTIONAL MEMORANDUMS

NUCLEAR TEST EQUIPMENT

GENERAL

The Office of Materials supplies test equipment containing radioactive isotopes for the purpose of determining the density and moisture content of soils, the density of HMA, and the density of PC Concrete. Properly used, this equipment poses no serious threat to the health and safety of personnel. However, because of the nature of the energy source, certain precautions must be observed.

The conditions in the Nuclear Materials License, issued to the Iowa Department of Transportation control how its employees use, store, and transport nuclear testing equipment. The Office of Materials Training Course is based on the regulations set forth in its license and applies only to full time employees of the Iowa Department of Transportation. Intermittent and summer employees will not be certified nor will they be allowed to operate or transport a nuclear gauge. This training course DOES NOT qualify workers to use, store or transport nuclear gauges that are regulated under other nuclear materials license, such as city, county, contractors, and consulting firms.

A. Training

1. Personnel operating or transporting this equipment must have successfully completed a training course conducted by the Central Laboratory or a nuclear gauge manufacturer, in the principles of nuclear testing and safety practices.

2. A Certified Nuclear Gauge Operator Card and Certification will be issued to each employee who satisfactorily completes the training course. This certification shall be valid for one year from the date of initial issuance. A 90-day grace period will be allowed.

3. Re-certification will be issued upon satisfactory completion of a Re-certification Training Course.

4. Certification will be withdrawn from employees that abuse the nuclear gauge, abuse the use of the Thermo Luminescent Dosimeters (TLDs) or violate the safety rules outlined in this memorandum.

5. A current list of Certified Nuclear Gauge Operators will be issued to each District Materials Office after the training courses are completed.

B. Radiological Safety

1. All conditions in our Nuclear Materials License must be followed.

2. Employees under the age of 19 shall not be permitted to operate, or assist in the operation of nuclear gauges.

3. A female employee shall not operate or assist in operation of nuclear gauges if the employee is known to be pregnant.

4. Never place the radioactive source of the gauge in the "Use" position, unless the gauge is first placed on the roadway material, or calibration block.

5. When performing tests at the job site, the operator shall not leave the nuclear gauge unattended. Upon completion of tests, the nuclear gauge shall be locked in the vehicle or a secure building to prevent unauthorized use, loss, theft or damage.

6. Exposure TLDs are available at the Central Laboratory. A TLD must be worn at all times when operating or transporting a gauge. Ensure proper storage of TLDs when not in use. Do not store TLDs with a nuclear gauge.

7. One TLD shall be assigned to only one operator during a single exposure period. TLDs shall be returned not later than 10 days after the end of an exposure period, to the Central Laboratory and shall be accompanied by a completed "Nuclear TLD Badge Certification" Form. (See Appendix B.)

8. The Central Laboratory shall maintain the exposure reports from the company that provides the TLD service.

9. Never allow children near a gauge.

10. Always lift the gauge by the handle.

11. Never dismantle or enter the gauge beyond that required for routine maintenance.

12. Leak tests will be conducted <u>only</u> by Central Laboratory personnel at least once a year.

13. When not in use the gauge handle shall be locked, and the container locked.

C. Exposure Limitations

1. In order to protect personnel from overexposure due to radiation, the maximum amount of exposure permitted is shown in the following table:

Type of Exposure	mRems (mSv) per Calendar Year
Whole Body; head and trunk; active Blood-forming organs; or gonads	5000 (50 mSv)
Lens of eyes	15,000 (150 mSv)
Extremities and skin of whole body	50,000 (500 mSv)

Because of the sensitivity of radiation to an unborn child, the exposure limit for an expectant mother is 500 mRem (5 mSv) for the entire pregnancy.

D. Transportation of Gauges

1. The individual responsible for physically transporting the nuclear gauge must provide secure measures to adequately prevent the unauthorized removal of the gauge from its place of storage during transport. When the gauge is in a vehicle and not under your constant control and surveillance, it must be secured as follows:

   A. In a car, van, pick-up with a topper, or a pick-up cab – The transportation case must be secured to a bracket with the cables provided. The vehicle, gauge, and transportation case, must also be locked.

   B. In a pick-up bed – The transportation case must be secured with two separate cables to two separate brackets on the pick-up bed with the cables provided. The gauge and transportation case, must also be locked.

2. A shipping document must accompany the gauge during transit. This document identifies the radioactive material and its container. The shipping documents are manufacturer-specific. For example, a Troxler document must be used to transport a Troxler gauge and cannot be used to transport a Humboldt gauge. (See Appendix D.)

3. While the nuclear gauge is being transported the shipping document shall be within the driver's reach. Unattended vehicles containing gauges shall have the shipping document in view on the vehicle's seat.

4. For an overnight stay at a motel, hotel or other lodging place, the locked gauge must be left in the locked vehicle. In the case of pickup trucks, the gauge must be locked in the cab of the truck.

E. Storage of Gauges

1. When the gauge is not in field use, the normal storage will be at a Resident Construction Office or District Office. This should be a special area designated for this purpose; with a radiation caution sign posted to notify personnel of the existence of radiation. There should be four locks between the general public and the radioactive material (the lock on the gauge handle is considered one). In addition, the gauge must be “double locked”. The double lock requirement means that there are two barriers that prevent an intruder from reaching the gauge. An example of double locked would be a lock on the room that houses the gauge and a cable securing the gauge case to an anchor on the wall or floor.

F. Accidents and Incidents

1. If a gauge is lost or stolen, notify the Radiation Safety Officer at the Central Laboratory <u>IMMEDIATELY</u>. If a gauge is involved in an accident follow the established Emergency Procedures. (See Appendix E.)

IOWA DEPARTMENT OF TRANSPORTATION
OFFICE OF MATERIALS

NUCLEAR TLD BADGE CERTIFICATION

I HEREBY CERTIFY THE FOLLOWING:

1. The operator(s) has attended the training course in nuclear testing conducted by the Central Laboratory.

2. All safety practices outlined in Materials IM 206 have been followed.

3. The following individual(s) was wearing a nuclear exposure badge on his/her front waist, while operating nuclear testing equipment, and that the exposure as determined on the enclosed badges should be indicative of radiation received for the appropriate time period.

EXPOSURE PERIOD/DATE: From: _____ To: _____

NAME	TLD BADGE NO.	GAUGE NO.	APPROX.TIME WITH GAUGE

COMMENTS:

The above information, to the best of my knowledge, is complete and accurate.

_____ _____
Person in Charge Date

cc: Office of Materials Laboratory
District File

Shipping Document for Radioactive Material

This is to certify that the above-named material is properly classified, described, packaged, marked and labeled and is in proper condition for transporting according to the applicable regulations of the Department of Transportation.

NATURE AND QUANTITY OF CONTENT

Proper Shipping Name: Radioactive Material, Special Form, n.o.s.

Identification Number: UN3332

Radionuclide: RQ Americium-241: Beryllium and Cesium-137

Form Description: Special Form - Sealed Source

Activity:
10 Millicuries Cesium-137
RQ 40 Millicuries Americium-241; Beryllium
Total: 0.050 Curies

PACKAGE

Number: One (1) Humboldt Gauge

Label Category: Yellow II

Transportation Index: 0.2

Type: A

Shipper and Carrier: Iowa Department of Transportation

Emergency Contact: Rodney Graven, Radiation Safety Officer (RSO)
515-233-7743 (7:00 AM – 3:30 PM)
515-370-2166 (After Hours)

Iowa Department of Public Health (IDPH)
515-281-3478 (7:30 AM - 4:30 PM)
515-323-4360 (After hours)

HUMBOLDT

Example

EMERGENCY PROCEDURES

In the event of damage at the work site:

1. Attend to anyone that may have been injured.
2. Determine the location of radioactive sources (typically the source rod).
3. Take control and deny access to the area (15 feet in all directions).
4. If a vehicle is involved keep it on site until it is determined that it is not contaminated.
5. Gather details about accident and damage – if possible, perform radiation survey.
6. Stay at the site but contact RSO with details
7. If necessary, the RSO will contact the IDPH and police.
8. The RSO will give guidance on whether to move the gauge or;
9. The RSO will travel to the site with a radiation survey meter.

In the event of damage in an auto accident:

1. Attend to injuries.
2. Deny access.
3. Gather details, document actions and take photos.
4. Contact the RSO and/or emergency response number.
5. Wait for instructions or arrival of emergency response.

In the event of theft:

1. Contact the RSO.
2. Call the regulatory agency
3. Immediately contact the police

At the earliest practical moment, the U.S. Department of Transportation's National Response Center will be notified at 800-424-8802 of an accident that occurs during the course of transportation (including loading, unloading and temporary storage) in which fire, breakage, spillage or suspected contamination occurs involving shipment of radioactive materials, in accordance with 49 CFR 171.15.

Emergency Phone Numbers

Rodney Graven *Radiation Safety Officer (RSO)*	*515-233-7743 (Daytime hours)* 515-370-2166 *(Mobile)*
Iowa Department of Public Health *Bureau of Radiological Health*	*515-281-3478 (Daytime hours)* *515-323-4360 (After hours)*

A nuclear gauge must be attended to at all times when it is in use in the field. It is very unlikely that a gauge being attended to will be accidently damaged.

Nuclear gauges present no major health dangers if basic precautions are taken and common sense is used. By following proper procedures and principles of radiation protection, and by helping others do likewise, you can feel comfortable and assured that your workplace is save.

Example

DETERMINING MOISTURE CONTENT & DENSITY OF SOILS, BASES & SUBBASES WITH A NUCLEAR GAUGE

SCOPE

This test method describes the procedure used in determining the in-place density and moisture content of soils, cold-in-place recycled asphalt pavement, soil aggregate sub-base, soil lime sub-base, and cement treated granular base or sub-base by the use of nuclear method.

OPERATOR QUALIFICATION

In addition to complying with IM 206 (as applicable), an operator, to determine the moisture content and density of soils, bases, and sub-bases with a nuclear gauge, must first demonstrate knowledge and proficiency in various related areas that may affect the test result. The specific areas will be determined by and demonstrated to the satisfaction of the District Materials Engineer or an authorized representative.

PROCEDURE

A. Apparatus

1. A recognized nuclear moisture-density gauge containing a radioisotope, detectors and related circuitry. The gauge shall be capable of determining densities by either the backscatter or direct transmission methods.

2. A reference standard for the purpose of taking standard counts, and for checking equipment operation.

3. A drill rod and combination guide-scraper plate for preparing the testing site.

4. Manufacturer Instructional Manual.

B. Standard Counts

1. Place the reference standard in a position recommended by the manufacturer to obtain standard counts.

2. Allow the gauge to warm up as suggested by the manufacturer.

3. Take one automatic four-minute standard count per manufacturer instructions. This count should be within 1% of the latest standard count established for the gauge. In the event the standard count varies by more than 1%, make a note of that number, reject that count on the gauge and then obtain another standard count. The two standard count numbers just obtained should be within 1% of each other <u>and</u> within 2% of the latest established standard count. If so, retain and record the last standard count taken.

4. If the day-to-day shift in the standard count varies more than 2% for moisture or 1% for density, reset the gauge on the standard and repeat the procedure in B3.

5. Keep a log of the gauge standard counts.

6. Standard counts should be taken twice a day to detect any shift during daily use.

C. Site Preparation

1. Select a random location in the testing area. Test will be run at three locations at this station, the center and the ¼ points from each side of the center. Moisture and density determinations will be based on the average of the readings from the three locations. Test locations should be such that the gauge will be a least 6 in. away from any vertical projection. Be sure the vehicle is at least 10 ft. away from the test site.

2. Remove all loose and disturbed material, and remove additional material as necessary to reach the top of the compacted lift to be tested.

3. Prepare a horizontal area, sufficient in size to accommodate the gauge, using the scraper plate supplied with the gauge; by planing to a smooth condition so as to obtain maximum contact between the gauge and material being tested. Make sure the gauge sits solidly on the site without rocking.

4. The maximum depressions beneath the gauge shall not exceed 1/8 in. Use native fines or fine sand to fill voids and level the excess with the scraper plate. The total area thus filled with native fines or sand should not exceed ten percent of the bottom area of the gauge.

D. Moisture Determination

1. Prepare test site as described in C.

2. Obtain a one-minute moisture count.

3. The moisture measurement is based upon the thermalization of fast neutrons by hydrogen atoms. Because some materials may contain hydrogen other than free water or may contain thermalizing elements other than hydrogen, the moisture content value should be verified by comparison with Materials IM 335. If the moisture differential between the two tests is greater than 1.5%, then not less than four moisture samples should be oven dried to determine the moisture correction factor. Refer to gauge manufacturer instructions for correcting gauge-derived moisture content values. Typically, if the gauge reading is higher than the values obtained by oven dry samples, the error is due to hydrogen containing materials. If the gauge reading is lower than that obtained by oven drying, the error is likely due to materials which absorb thermalized neutrons. Note: Moisture correction is not typically required for embankment materials.

E. Density Determination - Direct Transmission

1. Place the guide plate on the site for the moisture determination and drive the drive pin through the guide to a depth at least 2 in. below the depth of material to be measured. Remove the drive pin by pulling straight up in order to avoid disturbing the access hole.

2. Place the gauge over the access hole and push the index handle down until the source has reached the desired depth.

3. With the source at the desired depth, pull the gauge so that the probe is in contact with the

near side of the hole, take and record a one-minute wet density count.

4. Generally no corrections for density need be made due to soil compositional error, however, if a soil has a mean atomic weight higher than limestone, the gauge may indicate a high density. If it is felt that the gauge is indicating an unrealistic high density, two undisturbed soil cores shall be obtained. These two cores should be sent to the Central Materials Laboratory and be tested for density using Iowa Test Method 102. A correction factor should be obtained based on the density measured by the Central Materials Laboratory. This factor should be applied to the field nuclear densities.

F. Calculations

When determining the moisture correction described in D4, refer to gauge manufacturer's instructions for moisture correction calculations.

G. General Notes

1. Do not attempt to operate a nuclear gauge before thoroughly reading the Instruction Manual.

2. Do not attempt to operate a nuclear gauge before thoroughly reviewing the radiological safety precautions described in Office of Materials IM 206, "Nuclear Test Equipment."

DETERMINING PLASTIC DENSITY OF PORTLAND CEMENT CONCRETE WITH A NUCLEAR GAUGE

SCOPE

The plastic density of PC Concrete is dependent on the materials, proportions, air content and consolidation. For given materials and proportions, the consolidation of the concrete is an important factor in its durability.

This test procedure determines the percent rodded density by comparing the in-place density from the nuclear gauge to the corrected rodded density determined using Materials IM 340.

PRECAUTIONS

- Before operating a nuclear gauge, you must have attended a course on operation and safety at the Central Laboratory and have a current Qualified Nuclear Gauge Operator Card.
- Never touch the end of the source rod with your hand. A plastic glove and a rag should be used when cleaning the rod and the rod should be pointed away from the body during this operation.
- DO NOT use any lubricants (i.e. spray lubricants or oil) on the source rod. Central Materials personnel will perform the necessary lubrication.

PROCEDURE

A. Determination of the Corrected Standard Rodded Density

Materials IM 340 is used to determine the density of the concrete mix. Use the tamping rod, not a vibrator, to consolidate the concrete. Perform at least 1 test per each ½ day of concrete production. Determine the following:

V_m, Volume of measuring bowl in cubic feet (on the side of the bowl).
W_1, Weight of the measuring bowl plus concrete in pounds.
W_2, Weight of the measuring bowl only in pounds.
$W_3 = W_1 - W_2$, Weight of Concrete in pounds.

$$\textit{Rodded}\ \text{Density} = \frac{W_3}{V_m}$$

$$\text{Corrected Rodded Density} = \frac{\text{Rodded Density x 94.0}}{\text{100 - Determined Air Content}}$$

Example:

Determined Rodded Density = 142.4 pcf
Determined Air Content = 7.4%

$$\text{Corrected Rodded Density} = \frac{142.4 \text{ x } 94.0}{100 - 7.4}$$

$$= \frac{142.4 \text{ x } 94.0}{92.6}$$

= 144.6 pcf

B. Test Record Forms

1. Record the following data in a field book or worksheets:

   a. Date
   b. Calibrated volume of the measuring bowl, V_m
   c. Weight of measuring bowl, W_2.
   d. Weight of measuring bowl full of concrete, W_1
   e. Location where concrete sample was obtained
   f. Corrected rodded density

C. Determination of the "In-Place" Density of the Plastic PC Concrete

1. Apparatus

   Nuclear gauge including standard calibration block and gauge instruction manual.

2. Standard Counts

   a. Place the standard calibration block in a position recommended by the manufacturer to obtain standard counts.

   b. Allow the gauge to warm up as suggested by the manufacturer.

   c. Take one automatic 4-minute standard count per manufacturer instructions. This count should be within 1% of the latest standard count established for the gauge. In the event the standard count varies by more than 1%, make a note of that number, reject that count on the gauge and then obtain another standard count. The two standard count numbers just obtained should be within 1% of each other <u>and</u> within 2% of the latest established standard count. If so, retain and record the last standard count taken

   d. If the day-to-day shift in the standard count varies more than 2% for moisture or 1% for density, reset the gauge on the standard calibration block and repeat the procedure in 2c above.

e. Keep a log of the gauge standard counts.

f. Standard counts should be taken twice a day to detect any shift during daily use.

3. Test Procedure

a. Prior to concrete placement, determine locations to avoid being near steel and select areas where a total minimum depth of 3 in. is available. Mark reference points for locations where nuclear densities are to be obtained.

b. Immediately behind the finishing machine, but prior to texturing and curing operations, center the nuclear gauge on the plastic concrete surface over the test location center.

c. Lower the source rod to the 2 in. direct transmission indent, making sure the gauge is properly seated. Do not go past the 2 inch depth with the source rod. The void created could cause the density reading to be lower.

d. Pull the gauge slightly toward the scalar end.

e. Obtain a 1-minute density count.

f. Without retracting the source rod, put on a plastic glove and pick the gauge up and clean the end of the source rod and the bottom of the gauge with a rag to remove all paste. Retract the source rod into the gauge.

g. Record the "in-place" nuclear density value (N_2) from the gauge.

4. Calculations

Corrected Nuclear Density = N_2+ C

N_2, "in-place" nuclear density in pounds per cubic foot.

C, Correction Factor (an adjustment factor for some gauges)

$$\text{\% of Rodded Density} = \frac{\text{Corrected Nuclear Density x 100}}{\text{Corrected Rodded Density}}$$

D. Test Record Forms

1. The following additional data will be recorded in field book or worksheets
   a. Location of "in-place" nuclear density
   b. “In-place" density, N_2
   c. Corrected nuclear density
   d. % of rodded density

2. Report this data on Form #821297. This blank form can be found at: W:\Highway\Materials\Nuclear gauge forms

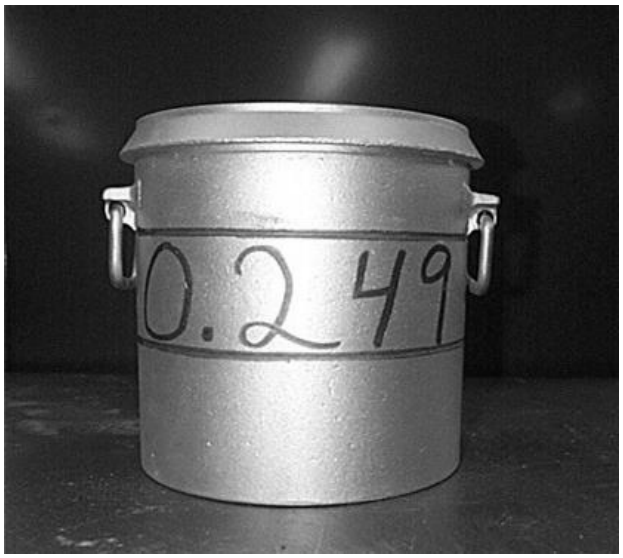

Figure 1. Measuring Bowl Showing Volume of Container (in Cubic Feet)

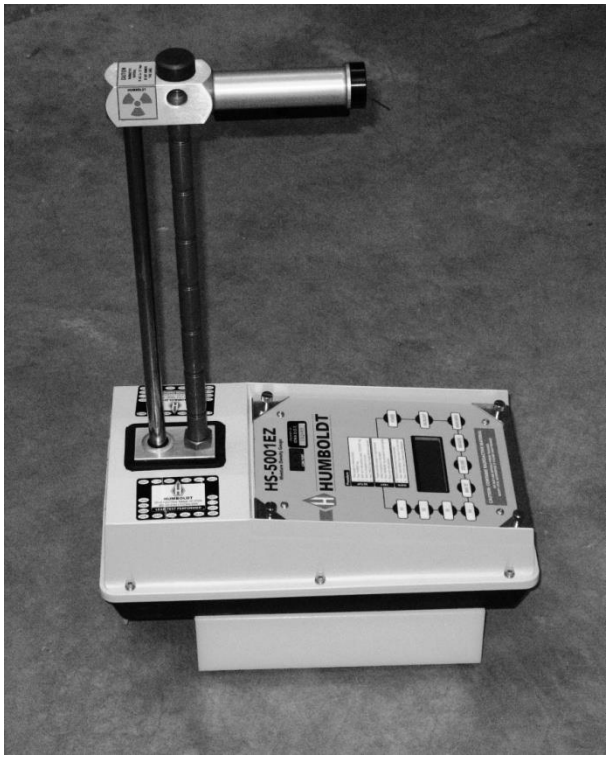

Figure 2. Nuclear Gauge in Place on Standard Calibration Block

Form 821297
May 2011

IOWADOT

Office of Construction & Materials

NUCLEAR TEST REPORT - DENSITY OF PLASTIC P.C. CONCRETE

		County	Des Moines
		Project No.	BRFN-034-9(184)--39-29
Contactor:	PCI Roads	Design	
Resident Engineer		Contract No.	
Nuclear Gauge No.	7113	Date	5/2/2011

RODDED DENSITY DETERMINATION				
1. Sampling Location	Mixer	Mixer	Mixer	
2. Calibrated Volume of Measure **(V)**	0.248	0.248	0.248	
3. Weight of Measure **(M)**	8.5	8.5	8.5	
4. Weight of Measure + Concrete **(W)**	44.4	44.6	44.1	
5. Rodded Density **(W-M) ÷ V**	144.8	145.6	143.5	
6. % Air Content	5.7	5.5	6.4	
7. Corrected Rodded Density **Rodded Density (Line #5) x 94** **100- % Air Content (Line #6)**	144.3	144.8	144.1	
8. Slump	1/4"	1/4"	1/4"	
9. Gauge Correction Factor	0.00	0.00	0.00	
IN-PLACE DENSITY DETERMINATION				
10. Test Location	436+22	436+14	436+05	
11. Depth at Test Location	2"	2"	2"	
12. In-Place Density (Gauge Reading)	153.5	149.9	148.2	
13. Corrected Density (Line #12 + Line #9)	153.5	149.9	148.2	
14. % Rodded Density (Line #13 ÷ Line #7) x 100	106.4%	103.5%	102.8%	

REMARKS:

Distribution: RCE, DME

Signed: _____
Inspector

COLD-IN-PLACE RECYCLING of HOT MIX ASPHALT (HMA) PAVEMENT

GENERAL

Cold in-place recycling (CIR) is a method of rehabilitating the existing asphalt pavement surface. As an “in-place” technology, all work takes place on the roadway using the existing asphalt pavement. Generally, material is not wasted or removed. The existing asphalt surface material is cold milled to the specified depth, sized to the specified gradation (maximum particle size), mixed with the specified asphalt stabilizing agents, and placed back on the pavement to the specified width, depth, profile, and cross-slope. This is accomplished in a continuous single-pass operation with the appropriate equipment. The CIR layer is compacted to the required density with rubber-tired and steel-wheeled rollers and can be opened to traffic the same day in most cases. As part of the project, the CIR layer is covered with a new HMA surface course or thin asphalt surface treatment.

This rehabilitation process is normally applied to projects with a structurally adequate pavement section. Projects with insufficient subgrade support should not be candidates for this type of rehabilitation. Projects with higher traffic volumes should do an engineering analysis to determine if this rehabilitation strategy can be successfully applied.

MATERIAL SAMPLING FOR MIX DESIGN

STABILIZING AGENT

The stabilizing agent from the proposed supplier is required for the mix design. A 10-gallon sample is needed to prepare the replicates for the range of application rates.

EXISTING PAVEMENT

Samples for mix design testing should be obtained from at least 3 locations. Significant mixture differences in the pavement to be recycled may require separate samples. Samples for mix design obtained from the milled RAP are the most representative. Mill a minimum of 50 feet of project length at each sample location. All samples shall represent the entire depth of CIR processing. 150 lb. bulk sample is needed to develop the mix design.

DEVELOPING THE MIX DESIGN

STANDARD EMULSION

A mix design is not required for CIR with standard emulsion. The production starts at 0.3 gallons of emulsion per square yard per inch of CIR compacted thickness. The Engineer may adjust the asphalt stabilizing agent application rate in the field to improve stability or minimize cracking.

FOAMED ASPHALT

The mix design of CIR with foamed asphalt requires a laboratory capable of generating controlled quantities of foamed asphalt. The mix design determines the proper application rate of foamed asphalt to achieve stability under dry and saturated conditions. Indirect tensile testing is used to measure the CIR mixture strength.

The mix design with foamed asphalt is performed by the Iowa DOT Central Asphalt Lab. The current mix design procedure is described in appendix A.

ENGINEERED EMULSION
The mix design of CIR with engineered emulsion requires close coordination with the emulsion supplier to formulate the residual asphalt binder to satisfy the mix design criteria. The mix design determines the emulsion properties and the application rate for the emulsion that satisfy the mix design criteria. A series of tests are used to measure strength and low temperature flexibility.

Procedures for the mix design with engineered emulsion are described in appendix B.

FIELD CONTROL OF ASPHALT STABILIZING AGENT

CALIBRATE AND MONITOR STABILIZING AGENT RATE OF FLOW
The contactor shall provide a positive means of accurately metering the rate of flow and total delivery of the asphalt stabilizing agent. The Engineer should verify the rate of application with production yield checks during construction.

The contractor may use the delivery pump as one of the options to determine total gallons of stabilizing agent used on the project. Pump accuracy is determined by comparing a metered volume or weight, correcting for temperature, against a known volume or weight. The pump must consistently deliver with in ± 1.5% of the required gallons (liters). If the contractor elects to use delivery ticket quantities and production yield, calibration of the pump would not be necessary.

The production yield is determined by comparing the quantity of asphalt stabilizing agent used to the quantity required for the square yards per inch (square meters per centimeter) of compacted thickness as measured. Production yield shall be with in the specified tolerance of the target application rate. The application rate specifies the quantity of standard emulsion, foamed asphalt, or engineered emulsion added to the RAP volume. Use Form #CIR-1, Yield Check to verify the rate of application by yield check.

If the standard emulsion is diluted, the target application rate must be adjusted by the amount of emulsion dilution. Dilution is not normally performed for CIR applications because it adds excess water to the CIR mixture.

ADJUSTMENT OF STABILIZING AGENT CONTENT
The Engineer must approve any revision in the asphalt stabilizing agent content. Changes in the content, particularly a reduction, may have a significant impact on the long term performance of the CIR layer. The Engineer and Contractor should consider adjustments to the CIR operations before reducing the asphalt stabilizing agent content.

STABILIZING AGENT SAMPLING
A one-quart (one-liter) sample of stabilizing agent shall be obtained each day. The sample from the first day and one each week shall be forwarded to the District Materials Engineer for testing. The other samples shall be retained for submission in the event of a failing test. The District Materials Laboratory will determine the percent residual binder of the emulsion sample or perform DSR tests on binder samples. The Central Materials Laboratory may conduct further qualifying tests as required in Materials I.M. 204.

The sample should be taken from the last point prior to incorporation. Do not sample from the asphalt supplier's tanker. Sample from the tanker that is part of the CIR train. A plastic bottle must be used to sample emulsions and a metal tin must be used for hot asphalt binder (foamed asphalt application).

Samples of loose CIR mixture and CIR stabilizing agent must be taken by someone with a minimum of a HMA Sampler Certification.

FIELD CHECK OF STABILIZING AGENT EXPANSION (FOAMING ACTION)

When foamed asphalt is used as the CIR stabilizing agent, the project inspector should periodically verify that the expansion (foaming action) of the stabilizing agent is adequate to properly coat the RAP particles. This check is typically done by what is commonly referred to as the "bucket test." The contractor carefully releases a small amount of foamed asphalt from the test nozzle into a 5-gallon bucket. The expansion (foaming) of the binder is indicated by comparing the maximum level the foam reaches in the bucket with the level after the foam completely collapses. This is referred to as the "expansion ratio" which, ideally, would be approximately 8:1. A second indicator of proper foaming is the foaming "half-life" which is the time it takes for the fully foamed asphalt to lose one-half of its expanded volume (i.e., collapse to 1/2 the fully foamed level in the bucket). A half-life of 4 to 6 seconds would indicate sufficient foaming action is taking place.

If above checks indicate insufficient expansion (foaming action) taking place, the temperature of the asphalt binder in the tanker is likely less than needed for proper foaming. The foaming equipment must have a visible temperature gauge for measuring the hot asphalt binder. The recommended binder temperature for producing foamed asphalt is 310 to 320 degrees F, depending on the asphalt binder grade used. The asphalt binder temperature required for proper foaming must be maintained during the CIR operation.

As a minimum, field checks of expansion (foaming) should be made following start-up of each day of CIR production, following each tanker exchange, and whenever variation in the RAP coating is observed. If insufficient foaming and/or nonuniform RAP coating is occurring, the contractor must stop CIR production and take corrective actions before resuming operations.

FIELD CONTROL OF CIR MIXTURE

MIXTURE SAMPLING
Sample loose CIR mixture from the roadway using sampling methods described in Materials I.M. 322. One 40 pound sample placed in an airtight bag or container will be required per day. Each sample must be taken from the roadway after the RAP and stabilizing agent have been mixed and placed by the screed and before rolling.

The sample shall be promptly delivered to the District Materials Laboratory for density determination. Additional samples should be taken when a significant change in the RAP or CIR mixture occurs.

LABORATORY TESTING PROCEDURE

1. Remove a representative 1000 g sample to determine the moisture content of the mixture. Dry the entire sample to a constant dry mass in an oven at a temperature not to exceed 275°F (135°C). Record all weight measurements to the nearest 0.5 g.

Moisture content will be calculated using the following formula:

$$\%\,\text{Moisture} = \frac{(\text{Wet Sample Mass} - \text{Dry Sample Mass})}{\text{Dry Sample Mass}} \times 100$$

Example: Given: Wet Sample Mass = 1017.0 g
Given: Dry Sample Mass = 985.5 g

$$\%\ \text{Moisture} = \frac{(1017.0 - 985.5)}{985.5} \times 100 = 3.2\%$$

Note: If the measured moisture content is below 3.5%, increase the moisture content in the sample to 4.0% before compaction.

2. Split the remainder of the bulk sample and prepare two 4000 g gyratory specimen for 6-inch diameter gyratory molds from each split sample. Molds shall be at room temperature. Do not use paper disks. Use plastic disks, wax-paper disks, or coat the base and head plate with a thin layer of light oil. Compact each sample to 25 gyrations. Determine the bulk wet density of the compacted specimen as follows.

3. Pre-weigh the gyratory mold with the base plate. Determine the mass of each mold to the nearest 0.5 g. Charge the mold with the CIR mixture and record the total mass to the nearest 0.5 g. Determine the mass of the specimen by subtracting the mass of the mold and base plate The height of the specimen may be recorded from the gyratory compactor at the completion of the compaction process.

The required height, of the compacted specimen, is 115 ± 5 mm. If the height needs to be adjusted, the amount of CIR needed is determined by the following formula:

$$\text{Adjusted weight of the mixture} = \frac{115\ (\text{weight of mixture used})}{\text{Specimen height obtained}}$$

Note: If the Laboratory Density is determined by Marshall Method, the following variations apply.

The material should be screened to remove particles larger than 1 inch. This will help produce a more consistent lab density using 4 inch molds.

Split out a 1200 g. Marshall specimen for the 4-inch diameter Marshall molds. Marshall molds shall be pre-measured and pre-weighed. Determine the mass of each mold to the nearest 0.5 gram. Determine the inside diameter of each mold to the nearest 0.001 inch. Volume tables, for each mold, should be prepared to the nearest 0.01 inch of measured height.

Prepare three specimens by using the Marshall hammer and applying 75 blows to each side.

Remove the mold from the base and weigh the mold and specimen to the nearest 0.5 gram. Determine the mass of the specimen by subtracting the mass of the mold. Remove the specimen from the mold and measure the height to the nearest 0.001 inch using a dial indicator or suitable caliper. Take a minimum of four measurements, average them, and round the average to the nearest 0.01 in.

4. Compute the laboratory wet density using the following equation.

$$\text{Gyratory Laboratory Wet Density (kg/m}^3) = \frac{\text{Specimen Mass (g)}}{\text{Specimen Height (mm)}} \times 56.588$$

Gyratory Laboratory Wet Density (lb/ft^3) = metric wet density (kg/m^3) × 0.062436

$$\text{Marshall Laboratory Wet Density (lb./ft.}^3) = \frac{\text{Specimen Mass (grams)}}{(453.6 \text{ gms/lb.})(\text{Specific Volume, ft.}^3)}$$

5. Compute the laboratory dry density using the following equation.

$$\text{Laboratory Dry Density (lb/ft}^3) = \frac{\text{Laboratory Wet Density}}{(100 + \text{Percent Moisture})} \times 100$$

NOTE: A difference in the character of the CIR (Coarser or finer) or wet weather conditions can affect the laboratory density. Variations in laboratory dry density of more than 3 pounds per cubic foot between successive samples shall be investigated promptly.

If the investigation determines the character of the CIR has changed, the corresponding dry density result representing the lot shall be used. An identifiable difference in pavement may be the cause of the change.

Unexplained variations or variations caused by rain, affecting the dry density by more than 3 pounds per cubic foot for successive Lots, shall be averaged with the previous days dry density result. The average of both days will be reported as the dry density result representing the current day's lot.

FIELD DENSITY TESTING PROCEDURE

The project inspection personnel shall select and mark the field density test locations. Each day of CIR production shall be divided into approximately equal sublots per IM 204. A random location in each sublot shall be selected for moisture and density testing.

The Contractor will determine the in-place density and moisture using a nuclear gauge in direct transmission mode at the maximum allowable probe depth in accordance with IM 334. The nuclear gauge moisture measurements shall be adjusted by the correction factor below to account for the asphalt binder in the mixture. The dry density and percent of lab density of each test location is determined using the following equations. Report both values to one decimal place. Sublots that do not achieve the specified minimum percent density should be re-rolled immediately and re-tested. The optimum condition for re-rolling is when the CIR layer is warm (typically in the afternoon). The Engineer may require adjustments to moisture

application rates.

Field Compacted Dry Density = Gauge Wet Density – Gauge Moisture + Correction Factor

$$\text{Percent Laboratory Density} = \frac{\text{Field Compacted Dry Density}}{\text{Laboratory Gyratory Dry Density}} \times 100$$

Example:

Field Compacted Gauge Wet Density		2090.6 =	130.5
Gauge Moisture	-168.2	=	-10.5
Correction Factor	+120.2	=	7.5
Field Compacted Dry Density	2042.6 kg/m³	=	127.5 lb./ft.³

DETERMINE THE CORRECTION FACTOR

The first day, the Contractor will sample approximately 1000 g of CIR mixture at each density test location (minimum of 10 locations) to determine the in-place moisture content. Each sample shall be properly sealed, transported to the Contractor's laboratory, and measured for moisture content. Use the paired nuclear gauge moisture content measurements and in-place (laboratory) moisture content measurements to determine the correction factor. Compute the actual in-place moisture for each of the sampled test locations using the following equation.

$$\text{Actual In place Moisture}(\text{lb/ft}^3) = \frac{(\text{Laboratory \% Moisture}) \times (\text{Nuclear Guage Wet Density})}{\text{Laboratory \% Moisture} + 100}$$

Example (for one set of paired values)

Nuclear Gauge Wet Density = 2090.6 kg/m³ (130.5 lb/ft³)
Laboratory % Moisture = 2.3%

$$\text{Actual In place Moisture} = \frac{(2.3)\times(2090.6)}{(2.3+100)} = \frac{4808.38}{102.3} = 47\text{kg/m}^3 = \frac{(2.3)\times(130.5)}{(2.3+100)} = \frac{300.2}{102.3} = 2.9\text{lb/ft}^3$$

Compute the average of the actual in-place moisture contents for the paired tests and compute the average of the nuclear gauge moisture readings for the same moisture sample locations. Then compute the correction factor using the following equation.

Correction Factor = Avg Gauge Moisture - Avg Actual Moisture

Example:

Average of Gauge Moisture	177.8	11.1
Average of Actual In-Place Moisture	- 57.7	- 3.6
Correction Factor:	120.1 kg/m³	7.5 lb./ft.³

Use Form #CIR-2, Determination of Moisture Correction Factor for showing the determination of a correction factor. This correction factor may seem large. It represents the asphalt binder in the CIR mixture. The nuclear gauge measures both asphalt binder and water in the moisture reading.

NOTE: Any significant change in the characteristics or components of the asphalt pavement being recycled requires a new correction factor.

DETERMINE RESIDUAL MOISTURE CONTENT OF THE PAVEMENT PRIOR TO CIR

Before the Contractor can place the HMA overlay or thin asphalt surface treatment over the CIR, the moisture content of the CIR layer must drop to one of three specified levels:

1. 3.5%
2. 0.3% above residual moisture
3. Reach a plateau of less than 5.0% and remain constant (within +/-0.3%) for a minimum of three calendar days.

The criterion for 0.3% above residual moisture recognizes the impact of the in-situ moisture content of the pavement structure in a given location. If the residual moisture content is above 3.5%, that section of CIR layer may never achieve the standard 3.5% criterion.

To use the 0.3% above residual moisture criterion, the Engineer and Contractor shall sample and test the asphalt pavement prior to initiating the CIR production. The samples must be taken at locations that represent the different drainage characteristics over the length of the project. For example, cut sections and fill sections may have different residual moisture in the top 3 to 4 inches of the asphalt pavement.

The samples shall be taken during normal pavement conditions, not immediately after a rain event. Postpone sampling until 5 calendar days after a rain.

Each sample must be cut dry. No wet coring. Dry sawing and impact air-hammers shall be used. The sample must represent the proposed depth of CIR rehabilitation. Immediately bag and seal the samples and send them to the District Materials Lab to determine the residual moisture content.

DETERMINE IN-PLACE MOISTURE CONTENT OF FINISHED CIR LAYER

The in-place moisture content must comply with specifications prior to applying a subsequent HMA surface or thin asphalt surface treatment. Moisture content shall be determined for the completed CIR layer in accordance with Materials IM 204 Appendix K. Two sample locations should be tested from each day of completed CIR at the frequency established in Materials IM 204 Appendix K to determine the moisture content of the CIR layer. Inclement weather or project conditions may require additional samples representing questionable areas to determine acceptable moisture levels. When the average of the moisture test results satisfies the curing criteria or no individual result exceeds the allowable residual moisture above, the layer is considered cured.

If the Engineer adjusts the curing period, cores may be taken prior to check for excessive moisture in the CIR as well as the underlying layers. When placing the first lift of HMA, rollers may be restricted to static mode to avoid migration of moisture from underlying layers into the new mat creating tenderness. When waiving curing criteria, responsibility for needed corrections to damaged areas in the first lift should be mutually agreed upon prior to placement.

Moisture content of the material may be determined by one of the following methods.

1. Use the same nuclear gauge that was used for density determination taking into account

the moisture correction factor for asphalt content. The following equation will convert the nuclear gauge readings to percent moisture.

$$\%\,\text{Moisture} = \frac{\text{guage moisture}(\text{lb/ft}^3 \text{ or kg/m}^3) - \text{correction factor}(\text{lb/ft}^3 \text{ or kg/m}^3)}{\text{guage wet density}(\text{lb/ft}^3 \text{ or kg/m}^3) - \text{guage moisture}(\text{lb/ft}^3 \text{ or kg/m}^3) + \text{correction factor}(\text{lb/ft}^3 \text{ or kg/m}^3)} \times 100$$

Example: $\%\text{Moisture} = \dfrac{(9.1\ \text{lb/ft}^3 - 7.5\ \text{lb/ft}^3)}{(130.5\ \text{lb/ft}^3 - 10.5\ \text{lb/ft}^3 + 7.5\ \text{lb/ft}^3)} \times 100 = 1.3$

2. Using a different nuclear gauge and establishing a new correction factor using the procedure previously noted under field density testing.

3. Extract 1000 g of material from the sample location. Dry the entire sample to a constant dry mass in an oven at a temperature not to exceed 275ºF (135ºC) or on a hot plate at a low temperature setting.

FIELD REPORT

Report daily results on Form #CIR-3, Daily Cold-In-Place Asphalt Recycling Report. All CIR forms can be found in the Asphalt Section of the Iowa DOT Web Page (http://www.iowadot.gov/Construction_Materials/hma.html).

MIX DESIGN METHOD FOR CIR WITH FOAMED ASPHALT

The mix design for CIR with foamed asphalt is performed by the Iowa DOT Central Laboratory. The primary steps in the mix design process are:

- Determine the optimum foaming characteristics of the asphalt binder.
- Determine the optimum moisture content of the RAP for compaction.
- Prepare, compact, and cure CIR mixture over a range of foamed asphalt contents
- Determine the optimum foamed asphalt content for the CIR mixture.

1. DETERMINE THE OPTIMUM FOAMING CHARACTERISTICS

By foaming the asphalt binder, the viscosity of the asphalt is significantly reduced to permit uniform mixing with cold RAP material. The ability to foam asphalt is controlled by the asphalt binder temperature and the amount of water injected into the asphalt. These values generally range from 280 to 320ºF (135 to 160ºC) and 1.5 to 3.5% injected water. The foamed is measured by the expansion ratio and half-life. The foam expansion ratio will increase (5 times to 15 times) as the amount of water injected increases. The half-life of the foam decreases (15 seconds to 5 seconds) as the amount of water injected increases. These conflicting conditions are merged to select the best foam properties for the project. An expansion ratio of 10 and half-life of 10 seconds are suitable for most CIR projects. The specification sets the temperature and injection water at values that are acceptable for most binders used for CIR in Iowa when a mix design is not performed.

2. DETERMINE THE OPTIMUM COMPACTION MOISTURE

CIR mixture is compacted to a maximum density through the lubricating affect of the free moisture in the mixture. This is not the moisture injected into the asphalt binder to create foam. To determine the optimum compaction moisture, a group of RAP samples are compacted with different moisture contents. The resulting dry densities are plotted to determine the optimum moisture required for compaction. Mix designs prepared over the last several years indicate that the moisture required to achieve maximum RAP density is approximately 4 percent.

Once the optimum moisture content is determined, the value is adjusted down slightly to account for the foamed asphalt added to the mixture

3. PREPARE MIXTURES

The bulk sample of RAP may require additional processing to achieve a gradation that passes the 1 inch (25 mm) sieve. The RAP is dried in open pans at room temperature, sieved into 3 size fractions (+3/8 inch, +1/8 inch, pan) and re-blended to achieve uniform samples.

Prepare a blending chart to determine what amounts of foamed asphalt will be added to the RAP. A minimum of three foamed asphalt contents should be selected. The preferred contents are 1.5%, 2.0%, 2.5%, and 3.0%.

Each batch should have sufficient mixture to compact three 4 inch gyratory samples. The dry RAP sample and compaction water are added to the mixing bowl and mixed for 45 to 60 seconds. The foamed asphalt is sprayed into the damp RAP while the mixer continues to mix the sample. Continue mixing for an additional 60 seconds.

4. COMPACT AND CURE MIXTURES
The gyratory compactor is used to compact each sample to 25 gyrations. Extrude the specimen and place it in the oven to cure at 105ºF (40ºC) for 72 hours. Remove the specimens from the oven and allow them to cool to room temperature.

5. TEST MIXTURES
Measure the volume and mass of each specimen and determine the density. Sort the specimens into equal sublots based on height and density for further testing.

Dry condition the samples of one sublot in an oven at 77ºF (25ºC) for 2 hours. The other sublot of specimens are placed in a 77ºF (25ºC) water bath for 20 minutes, vacuum saturated (50mm Hg) for 50 minutes, and then allowed to rest in the 77ºF (25ºC) bath for an additional 10 minutes.

Perform the indirect tensile test (IDT) and calculate the average IDT strength for each sublot. Plot the average IDT wet and dry strength for each foamed asphalt content.

6. MIX DESIGN REPORT
The mix design report will provide the results for optimum foam characteristics, optimum compaction moisture content, and optimum foamed asphalt content. Specific report values include:

- Asphalt binder temperature for foaming (ºF or ºC)
- Percent injection water for foaming (% of asphalt by weight)
- Optimum compaction moisture content (% of dry RAP by weight)
- Optimum asphalt foam content (% of dry RAP by weight)

MIX DESIGN METHOD FOR CIR WITH ENGINEERED EMULSION

The mix design for CIR with engineered emulsion is performed by the Contractor. The primary steps in the mix design process are:

- Process, dry, sieve, and blend the RAP.
- Select the engineered emulsion.
- Prepare, compact, and cure CIR mixture over a range of emulsion contents.
- Determine the engineered emulsion content for the CIR mixture.

1. PREPARE THE RAP SAMPLE

The bulk sample of RAP may require additional crushing to meet the gradation band shown. The RAP is dried in open pans at room temperature, sieved into a minimum of 3 size fractions (+3/8 inch, +1/8 inch, pan) and re-blended to achieve uniform samples.

Sieve Size	**%passing**
1.5 inch (37.5 mm)	100
1.0 inch (25 mm)	100
3/4 inch (19 mm)	85-95
No. 4 (4.75 mm)	40-55
No. 30 (600 µm)	5-15
No. 200 (75 µm)	0.5-3

2. SELECT THE ENGINEERED EMULSION

Standard asphalt binder grades used for asphalt emulsions may not have appropriate characteristics to achieve the desired CIR mixture properties. By trial and error, the designer must select the base asphalt grade for the emulsion.

3. PREPARE MIXTURES

Prepare a blending chart to determine what amounts of engineered emulsion will be added to the RAP. A minimum of three emulsion contents should be selected. The preferred contents are 2.0%, 2.5%, 3.0% and 3.5%.

In addition to the engineered emulsion, 1.5% water is added to represent the water used in the milling process.

The dry RAP sample and 1.5% water are added to the mixing bowl and mixed for 45-60 seconds. The engineered emulsion is added to the damp RAP while the mixer continues to mix the sample. Mixing continues for an additional 60 seconds. A set of three specimens can be prepared in each batch.

4. COMPACT AND CURE MIXTURES

Specimens shall be compacted immediately after mixing. Do not use paper disks. Specimens shall be compacted with a gyratory compactor in a 4-inch mold at 1.25 degree angle, 87 psi (600 kPa) ram pressure, and 30 gyrations. The mold shall not be heated. Extrude specimens from molds immediately after compaction. Place each specimen in a small container to account for material loss from the specimens during curing.

Cure compacted specimens in 140ºF (60ºC) forced draft oven for 48 hours. After curing, cool specimens at ambient temperature for 12 hours.

5. TEST MIXTURES

A. Determine bulk specific gravity (density) of each compacted (cured and cooled) specimen according to ASTM D 2726 or equivalent; however, the mass of the specimen in water (measurement C) should be recorded after 1 minute of submersion.

B. Determine specimen heights according to ASTM D 3549 or equivalent. Alternatively, the height can be obtained from the gyratory compactor readout.

C. Sort the specimens into equal sublots based on height and density for further testing.

D. For the three specimens of one sublot, determine corrected Marshall stability by ASTM D 1559 Part 5 at 100ºF (40ºC) after 2 hour temperature conditioning in a forced draft oven. This testing shall be performed at the same time that the moisture-conditioned specimens are tested.

E. For the three specimens from the other sublot, vacuum saturate to 55% to 75%, soak in a 75ºF (25ºC) water bath for 23 hours, followed by a 1 hour soak at 100ºF (40ºC). Determine corrected Marshall stability.

F. Compute the retained strength as the average moisture conditioned Marshall stability strength divided by the average dry Marshall stability strength.

G. Perform the thermal cracking test for critical cold temperature. The temperature is based on FHWA LTPPBind software for 50% reliability at 3 inches below the pavement surface. The required temperature for the specification is –20ºC. Perform the indirect tensile testing according to AASHTO T 322 with the following exceptions:

1) Specimens shall be 6 inches in diameter and at least 4 1/2 inches (115 mm) in height and compacted to the design density and emulsion content determined from the Marshall Stability Testing. Trial specimens are needed to establish the number of gyrations for compacting the 6-inch specimens. Test specimens shall be cured at 140ºF (60°C) for 72 hours. After curing, two specimens shall be cut from each compacted specimen to 2 inches in height.

2) Measure the bulk specific gravity of each cut specimen.

3) Test two specimens at each of three test temperatures (-20ºC, -10ºC, 0ºC).

4) The tensile strength test shall be carried out on each specimen directly after the tensile creep test at the same temperature as the creep test.

5) The critical cracking temperature is defined as the intersection of the calculated pavement thermal stress curve (derived from the creep data) and the tensile strength line (the line connecting the results of the average tensile strength at the three temperatures).

H. Perform the raveling test. The apparatus used for the raveling test is a modified A-120 Hobart mixer and abrasion head (including hose) used in the Wet Track Abrasion of Slurry

Surfaces Test (International Slurry Seal Association; ISSA TB-100). The rotation speed for the raveling test is not modified from ISSA TB-100. The ring weight is removed from the abrasion head for the raveling test below. The weight (mass) of the abrasion head and hose in contact with the specimen should be 1.3 pounds ± 0.5 ounce (600 g ± 15 g). The prepared sample must be able to be secured under the abrasion head, and centered for accurate result, allowing for free movement vertically of the abrasion head. The device used for securing and centering the sample must allow a minimum of 3/8 inch (10 mm) of the sample to be available for abrasion. The Hobart mixer will need to be modified to allow the sample to fit properly for abrasion. The modification may be accomplished by adjusting the abrasion head height, or the height of the secured sample. A Raveling Test Adapter can be purchased through Precision Machine and Welding, Salina, KS (785) 823-8760. Please reference the Hobart Model number A-120 when ordering. The C-100 and N-50 Models are not acceptable for this test procedure due to differences in size and speed of rotation.

1) Prepare two samples at the design moisture content and emulsion content. The size of each sample should be sufficient to meet the compacted specimen dimensions described below. (note: 6 pounds is an approximate weight (mass) to meet the criteria).

2) After mixing, place the mixture into a 6 inches (150 mm) gyratory compaction mold and compacted to 20 gyrations. The compacted specimen height shall be 2 3/4 inches ± 1/4 inch.

3) Extrude the samples from the compaction mold and placed on a flat pan to cure at a temperature of 50ºF +/- 2ºF (10ºC +/- 1ºC) for 4 hours ± 5 minutes.

4) The specimens shall be weighed after curing, just prior to testing.

5) The specimens shall be placed on the raveling test apparatus. Care should be taken that the specimen is centered and well supported. The area of the hose in contact with the specimen should not have been previously used. It is allowable to rotate the hose to an unworn section for testing. The abrasion head (with hose) shall be free to move vertically downward a minimum of 1/4 inch (5 mm) if abrasion allows.

6) The samples shall be abraded for 15 minutes and immediately weighed.

7) The percent raveling loss shall be determined as follows:

$$\text{Raveling Loss} = \frac{(\text{Weight Before Test - Weight After Abrasion})}{\text{Weight Before Test}} \times 100$$

8) The average of the two specimens shall be reported as the Percent Raveling Loss. There should not be a difference of 0.5% Raveling Loss between the two test specimens for proper precision. A difference of > 0.5% will require the test to be repeated. If both of the samples have a Raveling Loss of > 10% the numbers shall be averaged and the precision rule will be waived.

I. Determine if the selected engineered emulsion within the emulsion content range tested meets the following properties. If not, repeat the design with another engineered emulsion.

Test	Criteria	Purpose
Marshall stability	1,000 lb. min.	Stability under traffic
Retained strength	70% min.	Ability to withstand moisture damage
Thermal Cracking	-20ºC max.	Resist low temperature cracking
Raveling Test	2% max.	Raveling Resistance

6. MIX DESIGN REPORT

The mix design report will provide the following results at the optimum engineered emulsion content:

- Engineered emulsion base asphalt PG grade
- RAP gradation
- Mixture dry density (lb/ft^3)
- Marshall stability (lb)
- Percent retained strength (%)
- Critical low temperature (C)
- Percent raveling loss (%)